


SMART TV / **4K ULTRA HD** / **HDR HIGH DYNAMIC RANGE** / **DLED DIRECT LED**

تُرِيَّفْ
تجعل أحلامك حقيقة

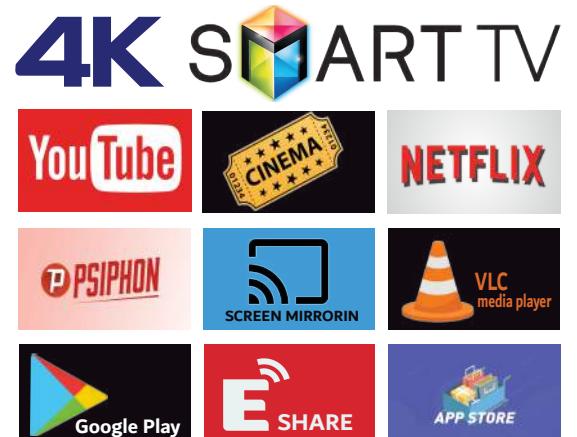

65"
/165cm
DLED



الفهرس

الميزات.....	1.....
تعليمات الأمان.....	1.....
تدابير وقائية.....	3.....
قائمة المواد.....	4.....
تركيب الجهاز.....	4.....
المداخل والمخارج.....	5.....
لوحة المفاتيح.....	5.....
جهاز التحكم عن بعد.....	6.....
تعليمات التشغيل.....	7.....

مواصفات فنية..... 18.....



الميزات

1. يتميز الجهاز بشاشة LED ذات اضاءة خلفية من النوع DLED حيث تساعد على حماية العين من الاجهاد والتعب.
 2. يتميز الجهاز بشاشة LED ذات جودة عالية، وبنظام اضاءة خلفية من النوع DLED، بحيث تم تصميمها لتحقيق مستويات ادوات تباهي عالية، بالإضافة إلى زمن استجابة صغير نسبياً. يساعد زمن الاستجابة الصغير في منع ظهور تشوهات الحركة السريعة.
 3. يمكن استخدام الجهاز كتلفزيون أو كشاشة حاسوب، حيث يتم التبديل بين المداخل المتعددة بسهولة.
 4. تم تطوير عملية فك المسمح الشبابكي بواسطة تقنيات حديثة، حيث تم التخلص من التشوهات الناتجة عن الحركة، مثل أسنان المتشدد والحواف غير الواضحة.
 5. يتميز بأربعة أنماط مختلفة للصورة، وأربعة أنماط أخرى للصوت.
 6. يتميز الجهاز بتقنية التباين الديناميكي التي تقوم بتعزيز الألوان وزيادة تباين الشاشة بشكل ملحوظ.
 7. يدعم عملية التوليف الآلية واليدوية.
 8. يتميز بامكانية اطفاء الجهاز الى وذلك بواسطة مؤقت زمني قابل للضبط، أو تلقائياً في حالة عدم وجود اشارة دخل.
 9. يحتوي على رسیفر داخلي وبالتالي لا يوجد أسلاك توسيع إضافية مما يجعل الجهاز ذو منظر جميل سواء عند تثبيته على الحاطن أو وضعه على القواعد.
 10. يتميز الرسیفر الداخلي بجودة صوت وصورة عالية
 11. يدعم الدقة الفائقة (4K)
 12. يسمح بالتحكم بجميع وظائف الجهاز بسهولة بواسطة جهاز التحكم عن بعد.
 13. تم تصميم دارات تغذية الجهاز بطريقة تسمح بتحفيض استهلاك الطاقة الكهربائية في كلار من وضع العمل وتوفير الطاقة.
 14. يحتوي مجموعة من المداخل المختلفة، وهي: USB,CI,HDMI,AV,DVB-S2,DVB-T/T2,RJ-45
 15. يحتوي واجهة الوسائط المتعددة من خلال المنفذ USB، والتي تسمح بتشغيل ملفات الفيديو
 16. يتميز الجهاز بمحظير أنيق، ذو اطار رفيع، بالإضافة إلى سماعة منخفضة.

تعليمات الأمان

شكر لك اختيارك لهذا المنتج المصنع من قبل شركة تربيو للصناعات الالكترونية. يتميز هذا المنتج بجودته العالية وميزاته ووظائفه المتعددة والتي تحقق للمستخدم متنه المشاهدة. تم تصميم الجهاز بطرق تضمن سلامته المستخدم، وقد تم فحصه بعناية قبل نقله خارج الشركة، إلا أن الاستخدام غير الصحيح قد يسبب حريق أو ماس كهربائي، كما قد يعرض المنتج للعطب.

اضمن سلامتك وسلامة الجهاز، ولضمان استمرار عمله لمدة طويلة، يرجى فراءة وتطبيق تعليمات دليل المستخدم بعناية قبل البدء باستخدام الجهاز، يرجى اتباع تعليمات الأمان مع مراعاة اشارات التنبية والتذير التالية

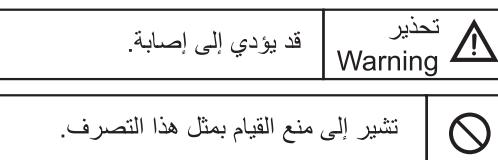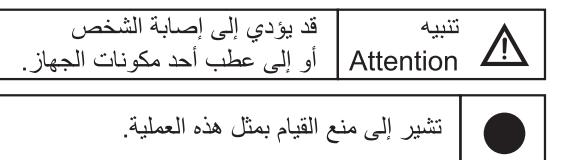

تعليمات الأمان



فی حال حدو

- انخفاض أو ارتفاع في الجهد الكهربائي، أو تذبذب في قيمة الجهد.
 - صدور صوت أو رائحة من داخل الجهاز.
 - عطب في كبل التغذية الكهربائية.
 - عطب في الجهاز نتيجة سقوطه على الأرض أو اصطدامه بشيء ما.
 - دخول سائل أو قطعة صلبة إلى داخل الجهاز.

● في حال حدوث تسرب لغاز المطبخ أو إحدى الغازات قابلة للاشتعال، لانقم باطفاء أو فصل جهاز التلفزيون أو أية أجهزة أخرى عن الكهرباء.


● وإنقاذه بالاغلاق الصمام الذي يسبّب انبعاث هذا الغاز، وقف بفتح الشبابيك والأبواب.



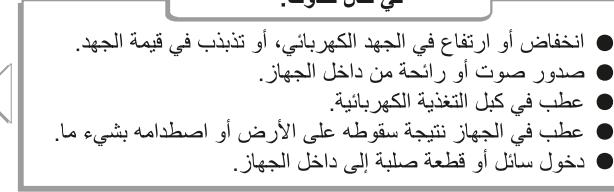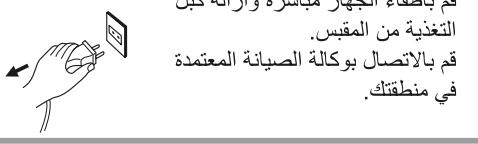

تحذير Warning

- لا تقم بوصول الجهاز إلى جهد كهربائي خارج المجال المسموح (100-240 فولط متناوب - التردد 50/60 هرتز).
 - لضمان سلامة الجهاز، قم بوصول الجهاز إلى مقبس ثلاثي التماسات (اثنان لجهد التغذية الكهربائية واحد للأرضي).
 - بفضل اطفاء الجهاز عند فصل أو وصل كبلات الاشارة.
 - لاتضع الجهاز في مكان غير ملائم من حيث:
 - 1. الرطوبة أو الحرارة المرتفعة جداً أو الحرارة المنخفضة جداً أو انتشار الغبار، أو تعرض الجهاز لأشعة الشمس بشكل مباشر
 - 2. وجود مواد قابلة للاشتعال أو الانفجار.
 - 3. وجود غازات قابلة للاشتعال.
 - 4. وجوده في المطبخ، أو في الحمام، أو غيرها من الأماكن غير الملائمة.
 - لاتقم بوصول الجهاز إلى قابس كهربائي مغلوب، أو غير ملائم، وتتأكد من أن الكبل الكهربائي للجهاز موصول بالقابس جيداً
 - تأكيد من خلو مأخذ الجهاز وقبس الطاولة من الأوساخ أو من القطع المعدنية الصغيرة.
 - حافظ على محول التغذية الكهربائية وتجنب اطهائه أو قطعه:
 - 1. لا تضع أشياء ثقيلة فوق الكبل.
 - 2. تأكيد من عدم مرور الكبل بجانب منابع حرارية.
 - 3. لا تقم بفصل الجهاز عن التغذية الكهربائية من خلال سحب الكبل.
 - لاتقم بوصول العديد من التجهيزات الكهربائية إلى قابس كهربائي واحد وذلك تجنباً لحدوث حريق ناجم عن استجرار تيار كهربائي أكبر من الحد المسموح به لهذا المقبس.
 - لاتضع مصدر للنيران (شمعة مثلاً) بالقرب من الجهاز وذلك تجنباً لحدوث ماس كهربائي أو حريق.
 - لاتضع أي قطعة صلبة أو حادة أو معدنية، أو حتى أي نوع من أنواع السوائل داخل منافذ الاشارة أو داخل فتحات التهوية وذلك لتجنب حدوث قصر كهربائي وبالتالي احتمالية حدوث ماس كهربائي.
 - تسبب الصور الثابتة تلفاً بالجهاز لذا تأكيد من عدم عرض صورة لأكثر من ساعتين، لأنها سوف تترك آثار وهو ما يسمى "حروق الشاشة". لتفادي بقایا الصور بر جي تقليل التباين والسطوع عند عرض الصور الثابتة.

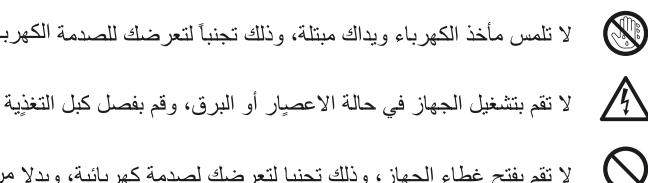


التركيب والتوصيل

- | قائمة المواد | | | |
|-------------------|------------------|-----------------------|---------------|
| 1. جهاز التلفزيون | 2. دليل المستخدم | 3. جهاز التحكم عن بعد | 4. ماجيك ماوس |


تركيب الجهاز

ضع التلفزيون واللوحة الأمامية نحو الأسفل على قطعة قماش ناعمة أو وسادة ناعمة على طاولة قم بدخول قاعدة الشاشة في المكان المخصص لها ثم قم بمحاذاة القب المخصص للبرغي في مكانه ثم قم بثبيت وشد البرغي بشكل جيد.

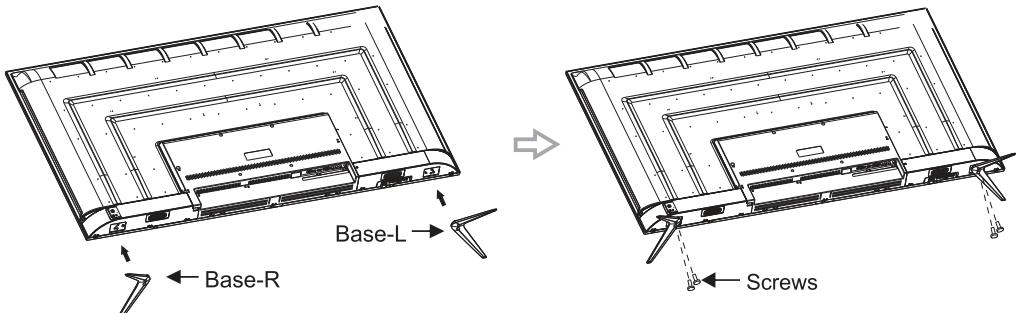


- يفضل وضع الجهاز بالقرب من القابس الكهربائي، وذلك لتسهيل عملية فصل ووصل التغذية الكهربائية.
- لضمان سلامة الجهاز، يرجى اختيار قاعدة ثبّيت حاطي ملائمة لقياس الشاشة.
- لضمان سلامة الجهاز، يرجى ثبّيته على أرضية مستقرة أو جدار ثابت.
- الأفضل أن تتم عملية ثبّيت الجهاز على الحاطن بواسطة شخص مختص وذلك لضمان جودة الثبّيت.


الثبّيت على القاعدة

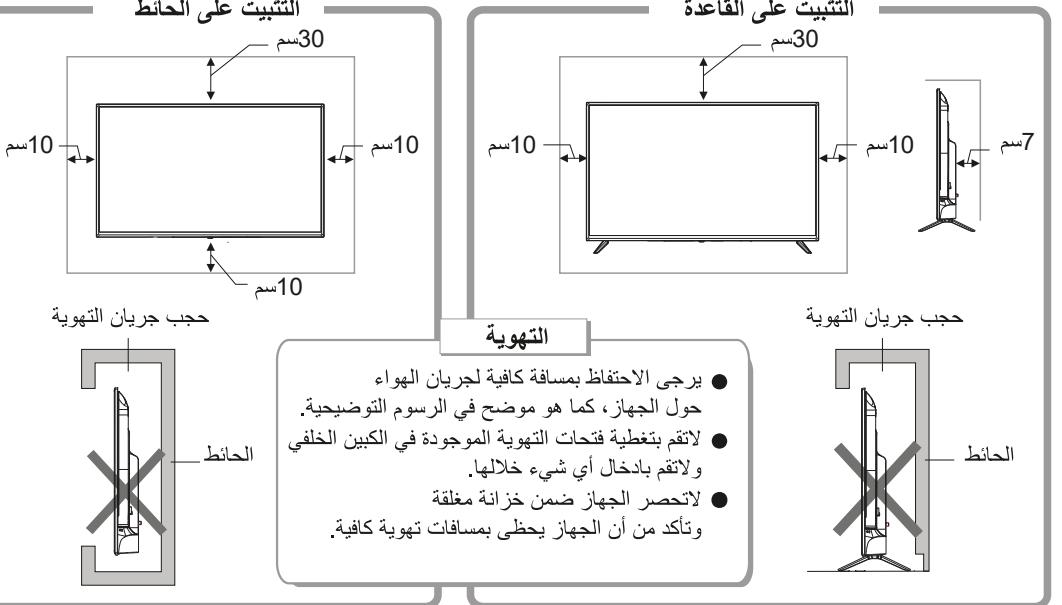

ضع التلفزيون في مكان ثابت ومستقر
تأكد من وضع الجهاز بالقرب من الحاطن لتفادي احتمال سقوطه.
لا تستخدم مع الجهاز مثبتات أو ملحقات غير تلك المزودة أو المقترحة من قبل المصنع

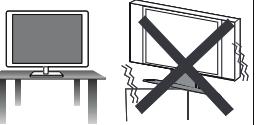


عد تدوير الجهاز يجب عدم مسك الجزء الأعلى والمسك فقط من الجزء الأسفل




عند رفع الجهاز لا تستخدم يدا واحدة بل استخدم يديك كليهما



لا تقف على الجهاز أو تتكئ عليه ، يجب الانتباه للأطفال بشكل خاص.
لا تضع أنية مملوقة بالسوائل بالقرب من الجهاز وذلك تجنباً لحدوث ماس كهربائي أو حريق ناتج عن تسرب الماء إلى داخل الجهاز.



التنظيف والصيانة
افصل الجهاز عن الكهرباء قبل تنظيفه، لا تستخدم محليل أو سوائل لتنظيف الجهاز،
نظف الجهاز فقط بواسطة قطعة قماش ناعمة ونافحة
في حال حدوث عطل لا تستخدم قطع غيار غير تلك التي يقتضيها المصنع، إن استخدام قطع غيار غير مناسبة قد يؤدي إلى حدوث صدمة كهربائية وحريق بالdarات الفصيرة أو حوادث أخرى

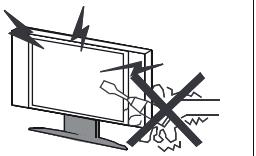

لاتغلق شفاف التهوية الموجودة في الكبين الخلفي للجهاز،
تم تصميم هذه الفتحات لتصرف الحرارة الداخلية للجهاز ومنع وصول العناصر الإلكترونية إلى درجات حرارة مرتفعة.



أسلاك التوصيل
يجب توجيه وحماية أسلاك الطاقة لتجنب السير فوقها والتسبب بوقوع الجهاز



مصادر الحرارة والرطوبة
ضعوا الجهاز جافاً وبعيداً عن مصادر الرطوبة



ضعوا الجهاز بعيداً عن مصادر الحرارة

ينصح بفصل الجهاز عن التيار الكهربائي خلال العاصفة الرعدية
وعند عدم استخدامه لفترة طويلة



يجب تشغيل الجهاز باستخدام مصدر الطاقة المتناسب 100-240 فولت ~ 50/60 هرتز

المداخل والمخارج


بعد التوصيل، اضغط على زر (SOURCE) لاظهار قائمة "مدخل الاشارة" على شاشة الجهاز. قم بالتبديل بين مداخل الاشارة المختلفة بالضغط على الزر "▲/▼" ، ثم اضغط على الزر (OK) لاختيار المدخل المطلوب.



قبل توصيل كبل الهوائي إلى المدخل (TV)، يرجى قطع التغذية الكهربائية عن جهاز التلفزيون من خلال اطفاء مفتاح التشغيل. لا تضع الهوائي بالقرب من كبلات أو منابع توتر عالي وذلك لحماية الجهاز من الصدمات الكهربائية. من الأفضل عزل الهوائي والكبلات الخاصة به عن التأريض العام وذلك تجنبًا لحدوث الصدمات الكهربائية.




7. مدخل الدقة الفائق HDMI2
8. مدخل الدقة الفائق HDMI3
9. مدخل البث الأرضي التمايلي والرقمي USB Ypbpr.10
10. مدخل البث الأرضي الفضائي DVB-S2 CI
11. مدخل شبكة الانترنت ETHERNET
12. مدخل الصوت والصورة AV mini
13. مدخل الدقة الفائق HDMI1

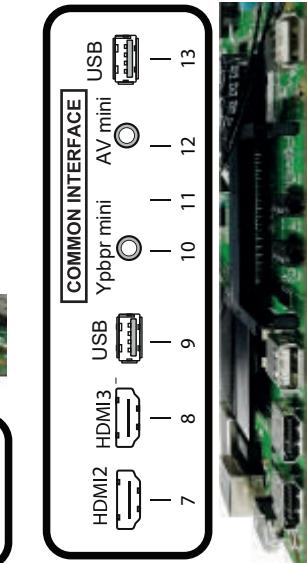


لوحة المفاتيح

- (1) مستقبل جهاز التحكم عن بعد
- (2) المؤشر الضوئي
- (3) مكبر الصوت
- (4) VOL+ / VOL- (5-4) يستخدمان لزيادة أو انقصاص مستوى الصوت
- (5) CH+ / CH- (7-6) يستخدمان للتبديل بين قنوات التلفزيون.
- (6) MENU (8) يستخدم لفتح القائمة الرئيسية.
- (7) SOURCE (9) يستخدم لفتح قائمة "مدخل الاشارة" لاختيار المدخل المطلوب
- (8) مفتاح التسجيل/حفظ الطاقة (10)
- (11) مفتاح قابس التيار

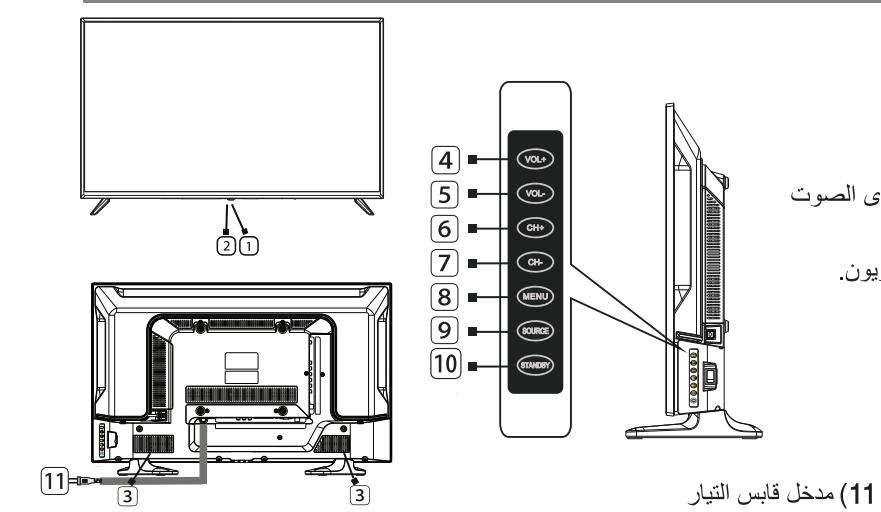

جهاز التحكم عن بعد

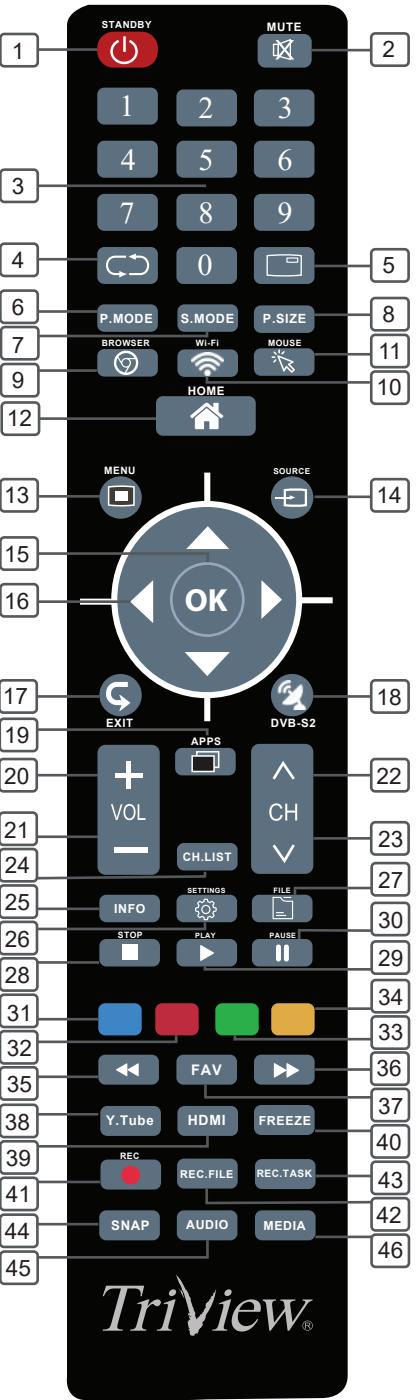


1. وضع الاستعداد Standby
2. قفل الصوت Mute
3. الأرقام 0-9: استمر في ضغط المفاتيح لاختيار القناة
4. الاسترجاع recall: الرجوع لقناة السابقة
5. دليل البرنامج EPG
6. P-MODE: اختيار نمط الصورة
7. S-MODE: اختيار نمط الصوت
8. P-SIZE: اختيار حجم الصورة
9. المتصفح browser: فتح متصفح الانترنت
10. Wi-Fi: تشغيل/إيقاف الواي فاي
11. mouse: تفعيل / الغاء تفعيل مؤشر الماوس
12. الرجوع إلى الشاشة الرئيسية Home
13. القائمة Menu
14. المصدر Source: اختيار مصدر مصدر الإشارات
15. زر الإدخال OK: للتأكيد أو الدخول
16. أسهم الانتقال
17. خروج Exit: اضغط لخروج من القائمة
18. DVB-S2: فتح مدخل الرسيفر الداخلي
19. زر التطبيقات Apps: عرض التطبيقات المفتوحة
20. زر زيادة الصوت vol+
21. زر إنقصاص الصوت vol-
22. اختيار القناة للأمام CH+
23. اختيار القناة للخلف CH-
24. قائمة القنوات CH LIST
25. معلومات المدخل INFO
26. الإعدادات Setting
27. فتح متصفح الملفات FILE
28. إيقاف التشغيل Stop
29. FF.36 FB.35 Play.29 Pause.30
30. أزرق Blue: الدخول على العنصر الأزرق أو الصفحة
31. أحمر Red: الدخول على العنصر الأحمر أو الصفحة
32. أخضر Green: الدخول على العنصر الأخضر أو الصفحة
33. أصفر Yellow: الدخول على العنصر الأصفر أو الصفحة
34. Fav: فتح قائمة القنوات المفضلة
35. Y-Tube: فتح تطبيق يوتوب
36. HDMI: فتح مدخل HDMI
37. Freeze: تثبيت الصورة
38. REC: بدأ التسجيل
39. REC FILE: فتح الملفات المسجلة
40. REC TASK: فتح مهمة التسجيل
41. Snap: التقاط صورة للشاشة
42. Audio: تحديد مسار الصوت
43. MEDIA: فتح مركز الوسائط

جهاز التحكم عن بعد

تشغيل الجهاز وإعداد النظام

قوائم الجهاز

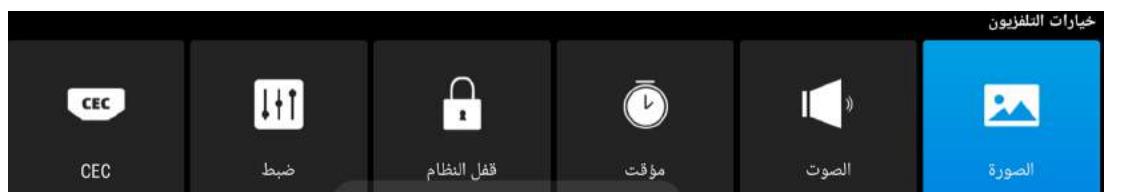

لعرض معلومات القناة اضغط الزر **INFO** في جهاز التحكم

1. رقم القناة الحالية

2. نمط **NICAM** للقناة الحالية

3. صوت النظام للقناة الحالية والتي يمكن تغييره من خلال قائمة البحث اليدوي التماضي



طريقة اضافة البطاريات إلى جهاز التحكم

قم ببعض خطوات البطاريات من جهاز التحكم، قم بوضع بطاريتين من النوع AAA ذات الجهد 1.5 فولط، انتبه إلى اتجاه قطبية البطاريات من خلال موافقة إشارات (+/-) بين جهاز التحكم والبطاريات.

طريقة استخدام جهاز التحكم

- لإظهار القائمة الرئيسية على شاشة الجهاز اضغط على الزر **MENU** من جهاز التحكم
- قم بالتبديل بين القوائم الفرعية (الصورة - الصوت - الوقت - القفل - الإعدادات) بواسطة الزر ▲/▼
- قم بالدخول إلى إحدى القوائم الفرعية بواسطة الزر **ENTER** أو ▶، وللعودة إلى القائمة السابقة اضغط الزر ◀
- قم بالتنقل بين خيارات القائمة الفرعية بواسطة الزر ▲/▼
- قم بضبط قيمة الخيار المطلوب بواسطة الزر ▶/◀
- يمكنك الضغط على زر **MENU** للاحتفاظ بالإعدادات التي قمت بتغييرها وللعودة إلى القائمة السابقة، ثم اضغط **EXIT** للخروج من القائمة بأكملها

تشغيل الجهاز وإعداد النظام

اختيار مصدر الإشارة

- لإظهار قائمة مداخل الشاشة على شاشة الجهاز اضغط على الزر **SOURCE** في جهاز التحكم
- اضغط الزر ▲/▼ للتبديل بين مداخل الإشارة المختلفة
- ثم اضغط **OK** لاختيار المدخل المطلوب



تشغيل الجهاز وإعداد النظام

ملاحظة : بإمكانك الضغط على زر P-MODE في جهاز التحكم مرة تلو الأخرى لـتغيير نمط الصورة بشكل مباشر



▪ نسبة العرض إلى الارتفاع Aspect Ratio

لاختيار نسبة العرض إلى الارتفاع اضغط زر ▼/▲ ثم اضغط ENTER للدخول واضغط زر ▶/◀ لتعديل القيمة، ولالعودة إلى القائمة السابقة اضغط زر MENU

▪ الحرارة اللونية Color Temperature

لاختيار خيار الحرارة اللونية اضغط زر ▼/▲ ثم اضغط ENTER للدخول وزر ▶/◀ لاختيار نمط الحرارة اللونية (قياسي ، بارد ، دافئ)

▪ تقليل الضجيج DNR

لاختيار خيار تقليل الضجيج اضغط زر ▼/▲ ثم اضغط ENTER للدخول وزر ▶/◀ لاختيار نمط الضجيج (عالي ، متوسط ، منخفض ، إيقاف)

2- قائمة الصوت

لإظهار القائمة الرئيسية على شاشة الجهاز اضغط على الزر MENU من جهاز التحكم
لاختيار قائمة الصوت من القائمة الرئيسية اضغط على الزر ▼/▲ ثم اضغط زر ENTER أو زر ▶ للدخول إليها
لاختيار الصنف الذي تريده تعييله في قائمة الصوت اضغط زر ▼/▲ ثم اضغط زر ENTER للدخول
اضغط زر ▶/◀ لتعديل القيمة ثم اضغط زر ENTER للدخول إلى القائمة الفرعية
بعد الانتهاء من التعديل اضغط زر MENU لحفظ الاعدادات والعودة إلى القائمة السابقة ثم اضغط زر EXIT
للخروج من القائمة بأكملها

1- قائمة الصورة

لإظهار القائمة الرئيسية على شاشة الجهاز اضغط على الزر MENU من جهاز التحكم

لاختيار قائمة الصورة من القائمة الرئيسية اضغط على الزر ▼/▲ ثم اضغط زر ENTER للدخول إليها

لاختيار الصنف الذي تريده تعديله في قائمة الصورة اضغط زر ▼/▲ ثم اضغط زر ENTER أو زر ▶ للدخول

اضغط زر ▶/◀ لتعديل القيمة ثم اضغط زر ENTER للدخول إلى القائمة الفرعية

بعد الانتهاء من التعديل اضغط زر MENU لحفظ الاعدادات والعودة إلى القائمة السابقة ثم اضغط زر EXIT

للخروج من القائمة بأكملها



▪ نمط الصورة

لإظهار نمط الصورة اضغط زر ▼/▲ ثم اضغط زر ENTER للدخول واضغط زر ▶/◀ لاختيار نمط الصورة (مستخدم ، قياسي ، متوسط ، ديناميكي)

بإمكانك تغيير قيم السطوع ، التباين ، اللون فقط عندما يكون نمط الصورة في وضع المستخدم

تشغيل الجهاز وإعداد النظام

(أنماط SPDIF المتاحة : RAW , PCM , OFF)

ثم اضغط زر ENTER أو زر ▶ للدخول واضغط زر ▶/◀ لتعديل القيمة، ثم اضغط زر MENU للعودة إلى القائمة السابقة مباشرة

3 - قائمة الوقت

- مؤقت قوائم التحكم OSD
- مؤقت النوم
- إيقاف التشغيل التلقائي



4 - قفل النظام


- قفل النظام
- قفل المداخل
- قفل القنوات
- قيود البرنامج



▪ نمط الصوت

لاظهار نمط الصوت اضغط الزر ▼ ثم اضغط زر ENTER للدخول واضغط زر ▶/◀ لاختيار نمط الصوت
(مستخدم ، قياسي ، موسيقا ، سينما)

يمكنك تغيير قيم ضبط باص ، تريل ، التوازن فقط عندما يكون نمط الصوت في وضع المستخدم
ملاحظة : يمكنك الضغط على زر S-MODE في جهاز التحكم مرة تلو الأخرى لเปลี่ยن نمط الصوت بشكل مباشر

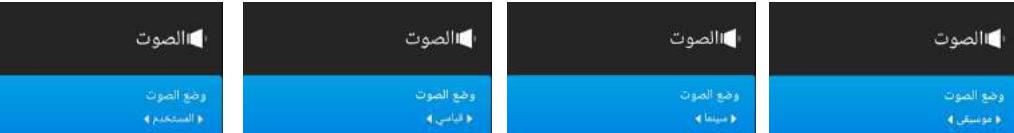

▪ التوازن Balance

لاختيار خيار التوازن اضغط زر ▼/▲ ثم اضغط ENTER للدخول واضغط زر ▶/◀ لتغيير القيمة،
للعودة إلى القائمة السابقة مباشرة اضغط زر MENU

▪ Surround

لاختيار خيار surround اضغط زر ▼/▲ ثم اضغط ENTER للدخول واضغط زر ▶/◀ لتغيير القيمة،
وللعودة إلى القائمة السابقة مباشرة اضغط زر MENU

▪ AVL

لاختيار خيار AVL اضغط زر ▼/▲ ثم اضغط ENTER للدخول واضغط زر ▶/◀ لتغيير القيمة، وللعودة إلى القائمة
السابقة اضغط زر MENU ، يمكنك تغيير هذه القيم فقط عندما يكون نمط الصورة في وضع المستخدم

▪ الصوت الرقمي Digital Audio output

لاختيار خيار SPDIF Output اضغط زر ▼/▲ ثم اضغط ENTER للدخول واضغط زر ▶/◀ لتغيير القيمة

تشغيل الجهاز وإعداد النظام

- **لغة القوائم**
لاختيار لغة القوائم اضغط زر **▼/▲** ثم اضغط **▶/◀** لاختيار تشغيل/إيقاف
- **مكان استخدام الجهاز**
لاختيار مكان استخدام الجهاز اضغط زر **▼/▲** ثم اضغط **▶/◀** لتحديد المكان
- **تشغيل المدخل الافتراضي عند إقلاع الجهاز**
لاختيار المدخل الافتراضي عند إقلاع الجهاز اضغط زر **▼/▲** ثم اضغط **▶/◀** لاختيار تشغيل/إيقاف
- **إعادة إقلاع الجهاز**
لاختيار خيار إعادة الإقلاع اضغط زر **▼/▲** ثم اضغط **▶/◀** لاختيار تشغيل/إيقاف

لاختيار خيار إعادة الإقلاع اضغط زر **▼/▲** ثم اضغط **ENTER** للدخول

6. خاصية **CEC**

- **إعداد خاصية CEC لمدخل HDMI**
- **إيقاف تشغيل الجهاز تلقائياً**
- **تشغيل الجهاز تلقائياً**
- **قائمة جهاز CEC**
- **مضخم صوت يدعم خاصية ARC**
- **أولوية الصوت**



● **تغيير رمز PIN**

- لإظهار القائمة الرئيسية على شاشة الجهاز اضغط على الزر **MENU** من جهاز التحكم
- لاختيار قائمة الإعدادات من القائمة الرئيسية اضغط على الزر **▼/▲** ثم اضغط زر **ENTER** للدخول إليها
- لاختيار الصنف الذي تريد تعديله في قائمة الصورة اضغط زر **▼/▲** ثم اضغط زر **ENTER** للدخول
- اضغط زر **▶/◀** لاختيار ثم اضغط زر **ENTER** للدخول إلى القائمة الفرعية
- بعد الانتهاء من التعديل اضغط زر **MENU** لحفظ الإعدادات والعودة إلى القائمة السابقة ثم اضغط زر **EXIT**
- للخروج من القائمة بأكملها



تشغيل الجهاز وإعداد النظام

تحرير القنوات

وظيفة	التردد	نوع	اسم	رقم
●	11975.0 MHz	DTV	Spare 2002	1
●	11975.0 MHz	DTV	France 24 Eng	2
●	11975.0 MHz	DTV	Sky News Arabia	3
●	11975.0 MHz	DTV	Spare 2006	4
●	11975.0 MHz	DTV	Spare 2007	5
●	11975.0 MHz	DTV	Spare 2008	6
●	11975.0 MHz	القفل	Baby TV	7
●	11975.0 MHz	DTV	OSN	8
●	11975.0 MHz	DTV	Spare 2013	9
●	11975.0 MHz	DTV	Sky News Arabia HD	10

● إلى الخلف

● المفضلة


● تبديل

● تخطي

● حذف

البلد أو المنطقة

لاختيار البلد أو المنطقة اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية

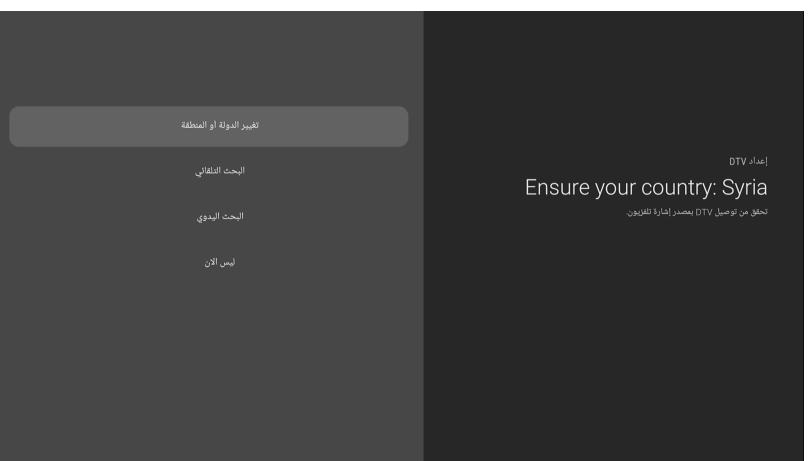


البحث التلقائي

لاختيار البحث التلقائي اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية

7. قائمة القناة

لإظهار القائمة الرئيسية على شاشة الجهاز اضغط على الزر MENU من جهاز التحكم

لاختيار إعداد القناة من القائمة الرئيسية اضغط على الزر ▼/▲ ثم اضغط زر ENTER للدخول إليها

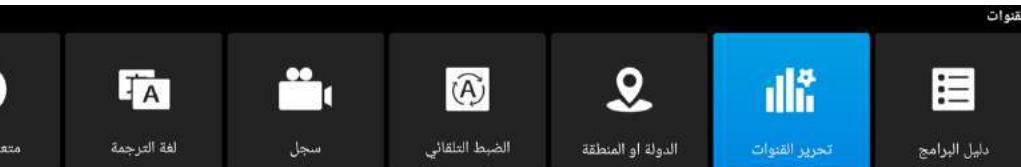

لاختيار الصنف الذي تريده تعديله في قائمة إعداد القناة اضغط زر ▼/▲ ثم اضغط زر ENTER أو زر ► للدخول

اضغط زر ►/◀ لتعديل القيمة ثم اضغط زر ▼/▲ للاختيار

بعد الانتهاء من التعديل اضغط زر MENU لحفظ الإعدادات والعودة إلى القائمة السابقة ثم اضغط زر EXIT

للخروج من القائمة بأكملها

دليل البرامج

في مدخل التلفزيون الرقمي DTV يمكنك الاطلاع على معلومات القناة بالدخول إلى دليل البرامج من خلال الضغط على زر دليل البرامج في جهاز التحكم.... وستظهر النافذة على النحو التالي



تحرير القنوات

لاختيار تحرير القناة اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية


حدد لاختيار صفحة البحث التلقائي ثم اضغط زر ENTER لبدء المسح



- لغات الترجمة**
لاختيار قائمة لغات الترجمة اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية



- قائمة التسجيل**
لاختيار قائمة التسجيل اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية

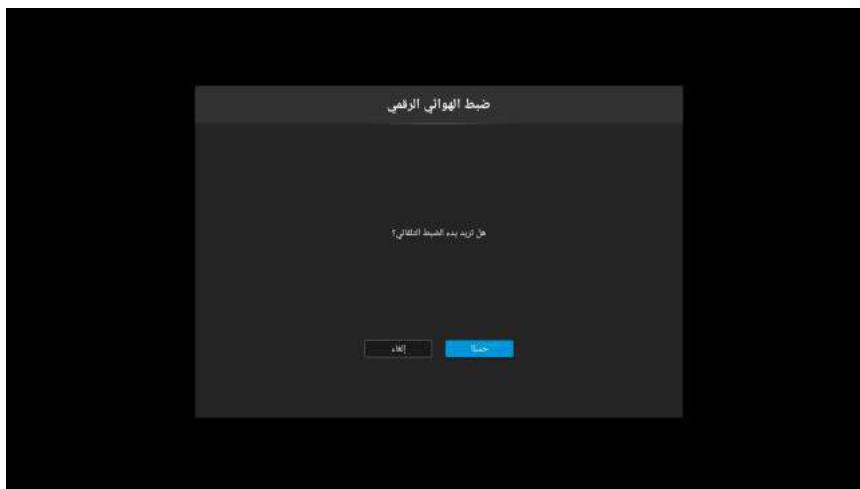


- البحث اليدوي**
لاختيار البحث اليدوي اضغط على الزر ▼/▲ ثم اضغط زر ENTER لتشغيل القناة المختارة وستظهر القائمة التالية




▪ **إعدادات التلفزيون الرقمي DTV**

لاختيار إعدادات التلفزيون الرقمي اضغط على الزر ▼/▲ ثم اضغط زر **ENTER** لتشغيل القناة المختارة وستظهر القائمة التالية

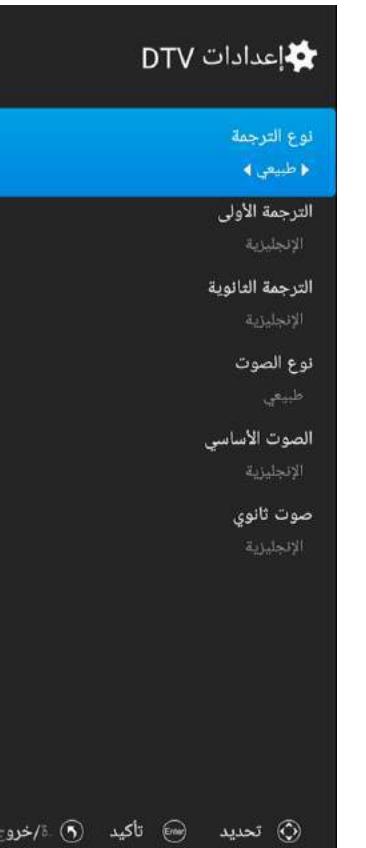


8- قائمة الوصول السريع

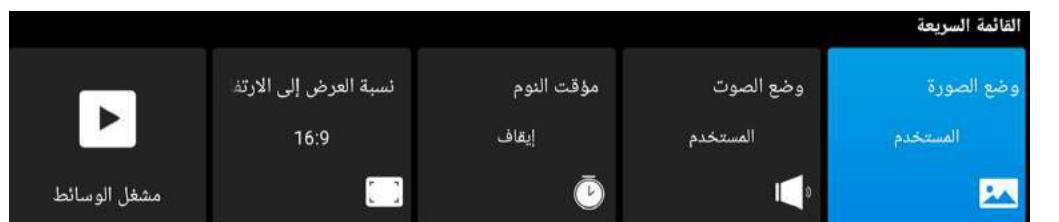



▪ **قائمة Multi Audio**

لاختيار قائمة Multi Audio اضغط على الزر ▼/▲ ثم اضغط زر **ENTER** لتشغيل القناة المختارة وستظهر القائمة التالية

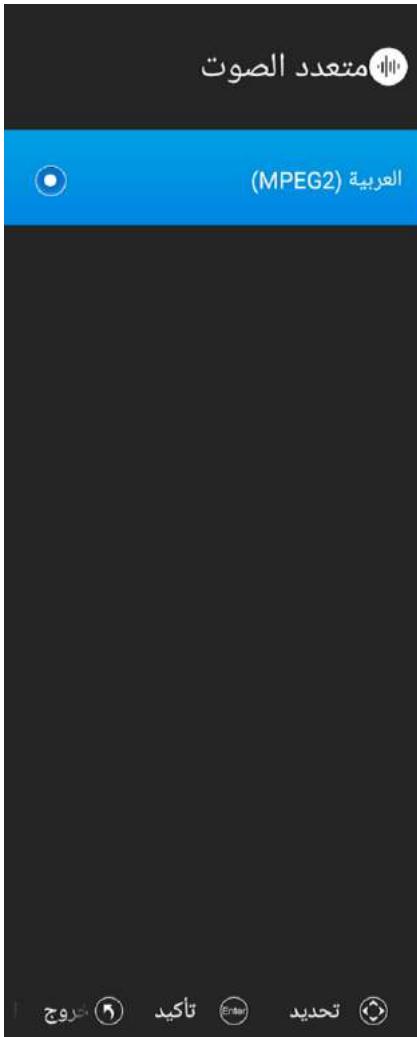





يمكنك أيضاً اختيار المتصفح للبحث عبر الانترنت كما في الشكل التالي

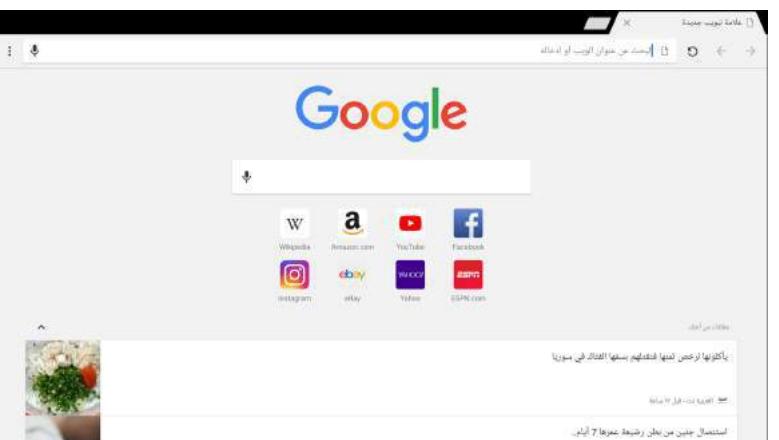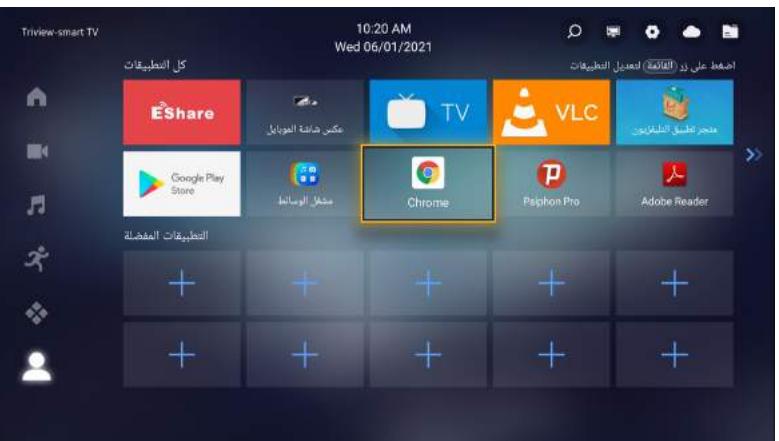


APPS 1 - التطبيقات
لاختيار التطبيقات من قائمة الدخول اضغط على الزر ▼/▲ ثم اضغط زر **ENTER** أو زر ► للدخول

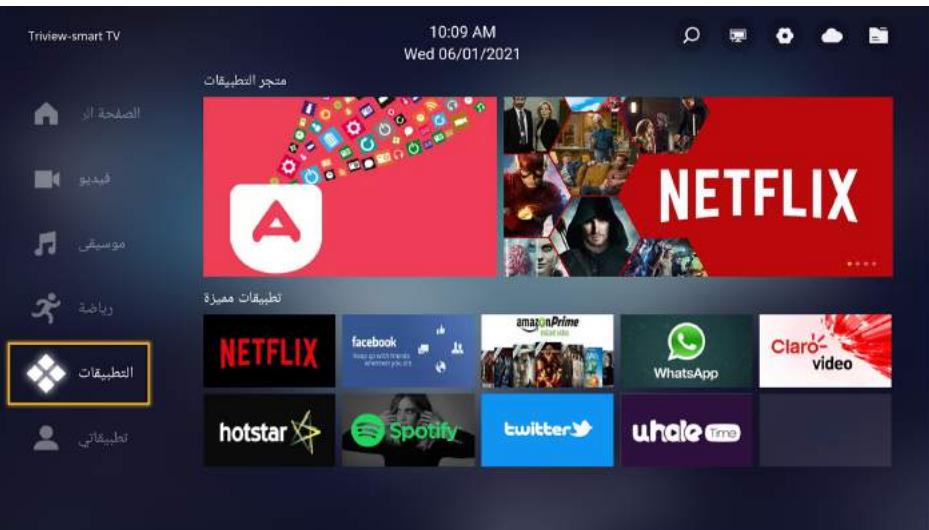

يمكنك اختيار متجر التطبيقات **Tv Store** لتنزيل التطبيقات التي تريدها كما في الشكل التالي

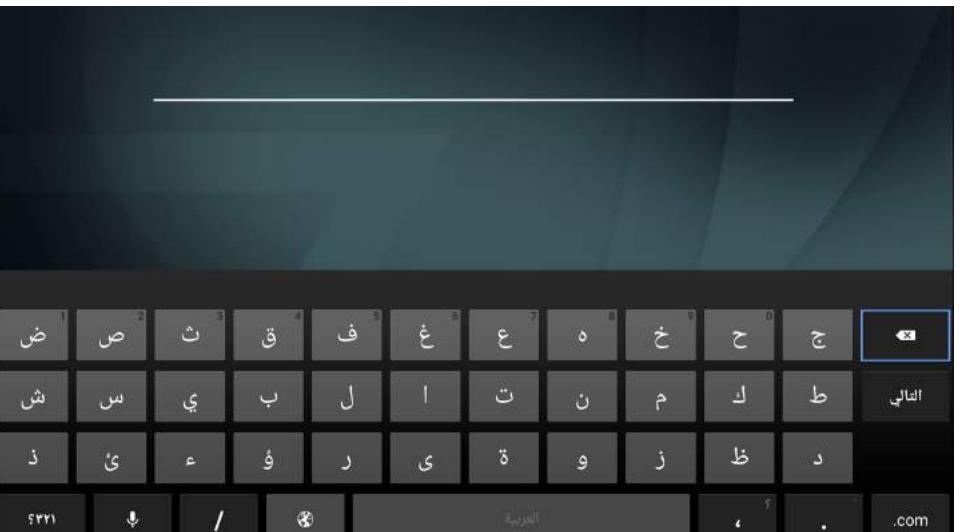

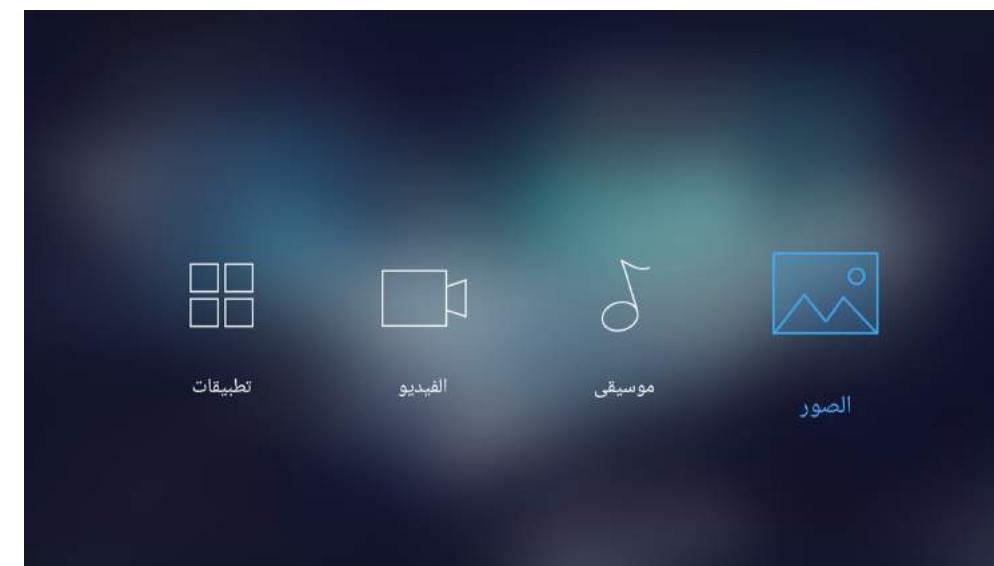

• الصور

لاختيار الصور من القائمة الرئيسية اضغط على الزر ▶/◀ ثم اضغط زر ENTER للدخول وللعودة إلى القائمة السابقة اضغط على الزر EXIT

TV -2


لاختيار TV من قائمة الدخول اضغط على الزر ▼/▲ ثم اضغط زر ENTER أو زر ► للدخول




- 3- تشغيل الوسانط

ملاحظة : يجب توصيل فلاشة أو كرت ذاكرة بالجهاز ثم الضغط على زر Source لتعيين دخل الجهاز على الوسانط قبل البدء بالدخول إلى قائمة تشغيل الوسانط


لاختيار الوسانط من قائمة الدخول اضغط على الزر ▼/▲ ثم اضغط زر ENTER أو زر ► للدخول بإمكانك أيضاً الدخول إلى الوسانط من خلال الضغط على زر MEDIA من جهاز التحكم

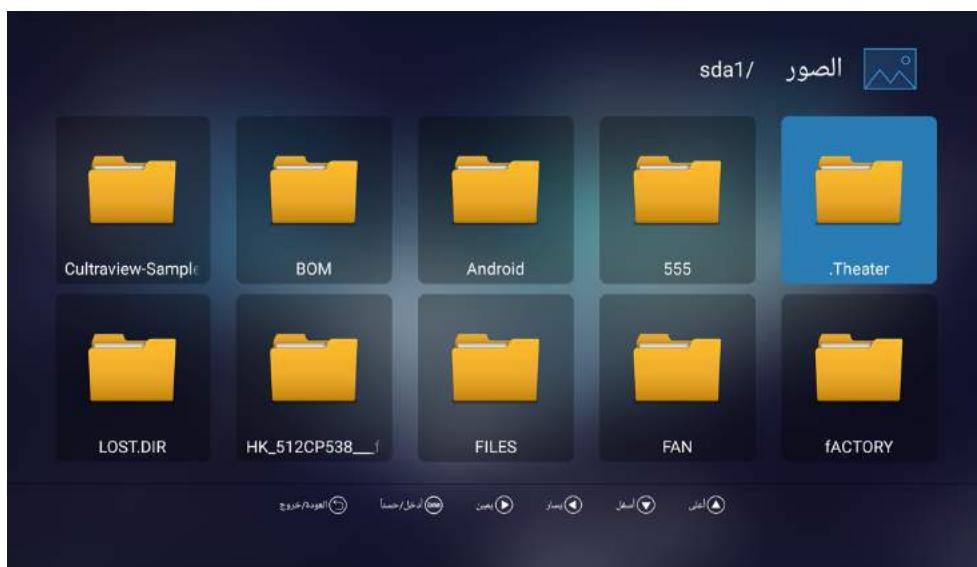

الشاشة الرئيسية

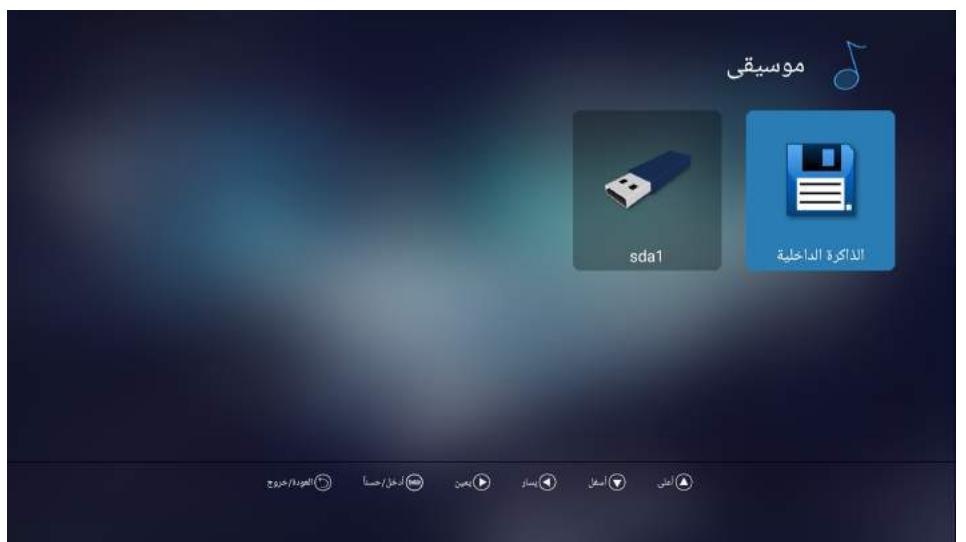

يمكنك مشاهدة معلومات مقطع الصوت الذي يتم تشغيله على يسار الشاشة

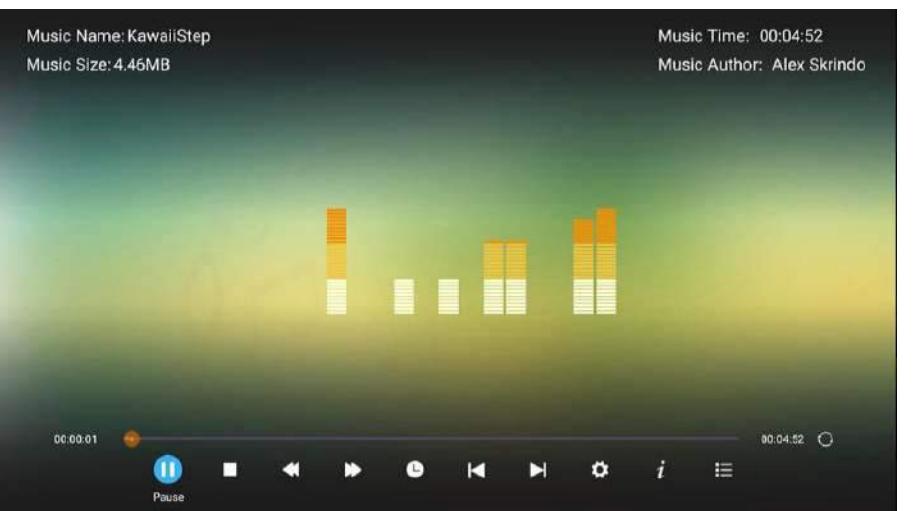

الشاشة الرئيسية



يمكنك معرفة معلومات المشغلة الحالية من خلال الضغط على زر **INFO** في جهاز التحكم ثم اضغط زر **▶||** للتشغيل والإيقاف، يمكنك مشاهدة حالة التشغيل في يمين الشاشة
اضغط زر **▶/◀** أو **▼/▲** لتدوير الصورة


ملاحظة : القوائم الأخرى والوصف هو نفسه الموجود في قائمة الأفلام

الموسיקה

لاختيار الموسيكا من القائمة الرئيسية اضغط على الزر **▶/◀** ثم اضغط زر **ENTER** للدخول
وللعودة إلى القائمة السابقة اضغط على الزر **EXIT**




الشاشة الرئيسية

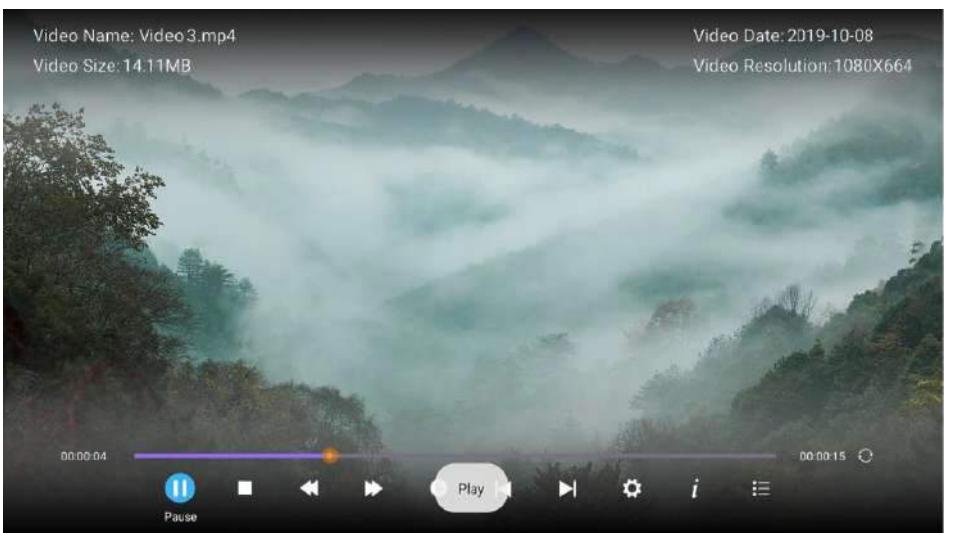

- لتشغيل الفيديو اضغط الزر **ENTER** أو الزر **▶▶**
- لإيقاف الفيديو اضغط الزر **EXIT** أو الزر **■**
- للعودة إلى الصفحة السابقة اضغط الزر **◀**
- يمكنك معرفة معلومات الفيديو المشغل في أي وقت من خلال الضغط على زر **INFO** في جهاز التحكم

• التطبيقات

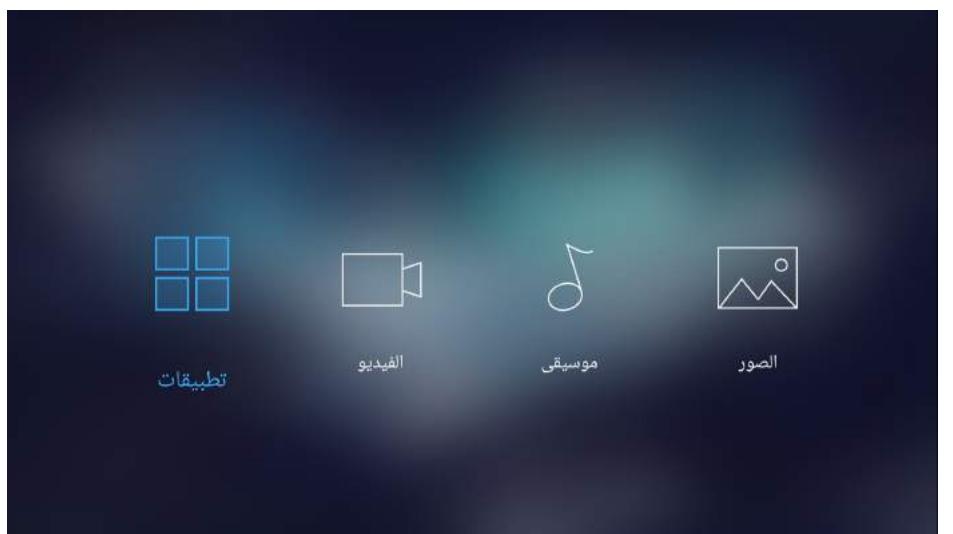

- لاختيار التطبيق الذي تريده اضغط على الزر **▼/▲** واضغط **ENTER** للدخول إلى المجلد الفرعي
- وللعودة إلى القائمة السابقة اضغط على الزر **EXIT**


الشاشة الرئيسية

▪ الفيديو

لاختيار الفيديو من القائمة الرئيسية اضغط على الزر **▶/◀** ثم اضغط زر **ENTER** للدخول
وللعودة إلى القائمة السابقة اضغط على الزر **EXIT**



لاختيار المجلد الذي تريده رؤيته اضغط على الزر **▼/▲** واضغط **ENTER** للدخول إلى المجلد الفرعي

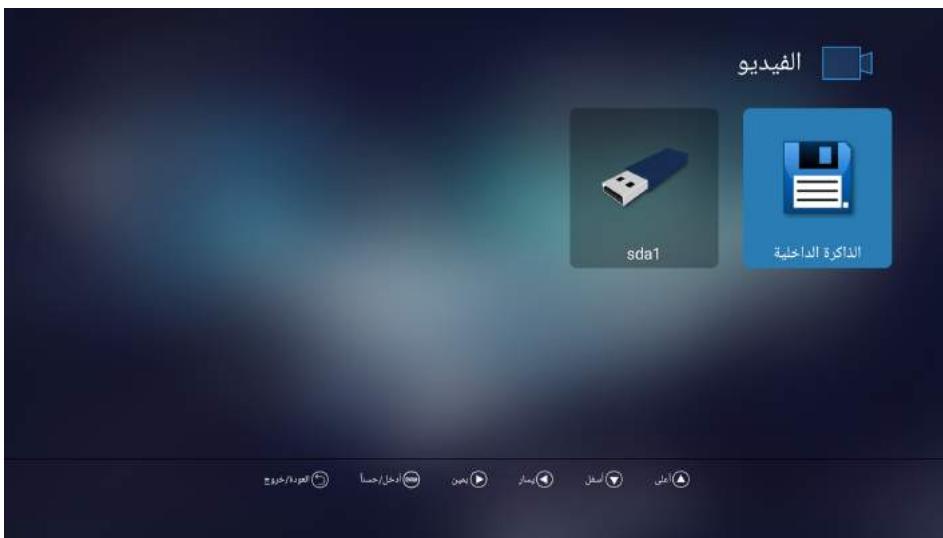



▪ إعدادات الشبكة



لتحديد الشبكة التي يمكنك فتح شبكة لاسلكية Wi-Fi عليها اضغط على الزر ▼/▲ كما في الشكل التالي



▪ إعدادات الوقت



▪ إعدادات عامة






اضغط على الزر ▶ لاختيار خيار الخلفيات التي يمكنك من معرفة الصور كما في الشكل التالي




لاختيار اللغة التي تريدها اضغط على الزر ▶ كما في الشكل التالي




اضغط على الزر ▶ لاختيار خيار التطبيقات التي يمكنك من معرفة عدد التطبيقات التي قمت بتحميلها كما يمكنك إلغاء تحميل التطبيق من خلال هذه الميزة كما في الشكل التالي

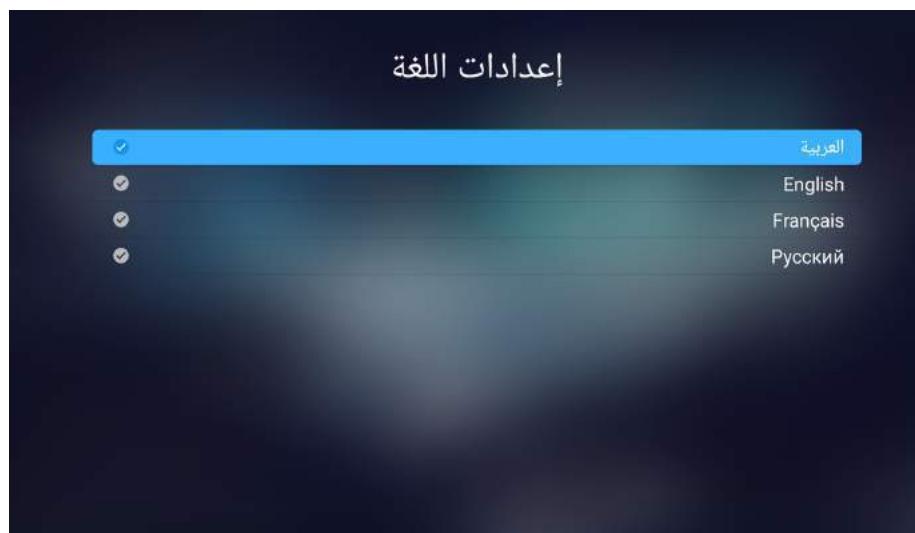

لاختيار الوقت التي تريده اضغط على الزر ▶ كما في الشكل التالي

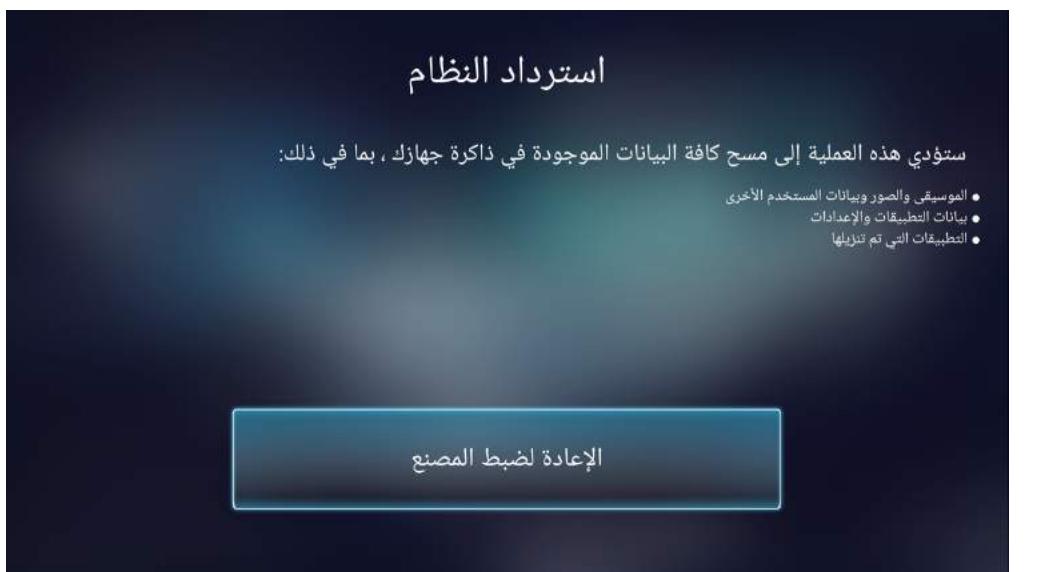

لاختيار خيار حول الجهاز الذي يمكنك من معرفة معلومات عن الجهاز اضغط على الزر ▶/◀ كما في الشكل التالي

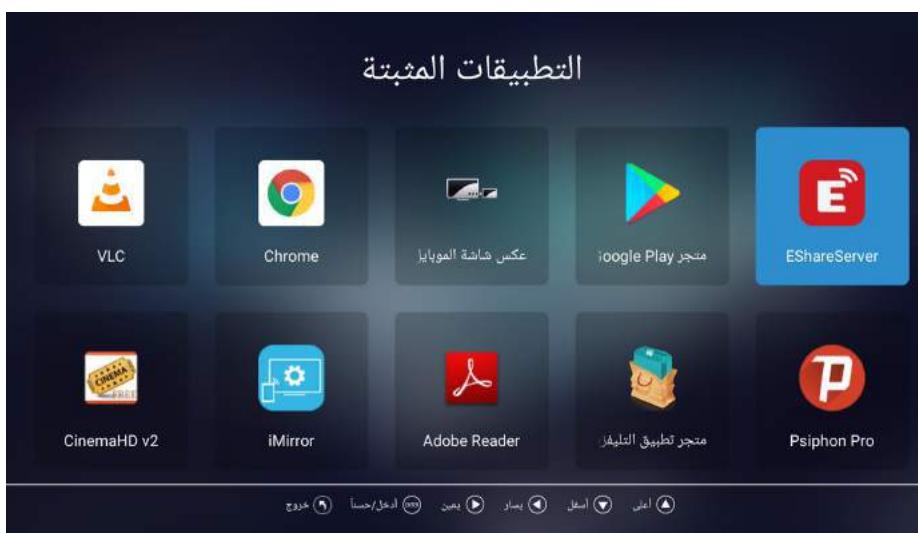

لاختيار خيار إعادة التعيين الذي يمكنك من إعادة ضبط الجهاز اضغط على الزر ▶/◀ كما في الشكل التالي



كشف واصلاح الأعطال

المواصفات الفنية

6520HDU9P0	موديل الجهاز
65"	قياس الشاشة
16/9	نسبة الطول للعرض
100-240 فولط متناوب 50/60 هرتز	وحدة التغذية الكهربائية
8 واط + 8 واط	استطاعة سماعات الصوت
أبعاد الجهاز: 1463 × 847 × 76 (م)	أبعاد (العرض × الارتفاع × العمق)
أبعاد الجهاز: 1463 × 906 × 255 (م)	مع قاعدة
الوزن الصافي: 20.5 كغ	والوزن
9.0.0	نسخة الاندرويد
2.0 GB	ذاكرة الوصول العشوائي RAM
16 GB	ذاكرة القراءة فقط ROM

درجة حرارة بيئة العمل: 0 ~ 40 درجة، الرطوبة: 20% ~ 80% بغير تكيف

المواصفات الفنية للجهاز:

- الأنظمة المدعومة: PAL SECAM, BG DK I.
- مدخل الهوائي: مدخل كبل محوري ذو مقاومة 75 أوم 1. DIN.
- مدخل صوت وصورة AV mini Ypbr mini
- مدخل صورة عالية الدقة HDMI
- مدخل صورة المنفذ USBx 2
- مدخل شبكة RJ 45
- مدخل شبكية HZ

أنماط العرض على المدخل HDMI:

HZ	التردد الرئيسي KHZ	التردد الأفقي	الدقة
59.94	31.468	480 p	
50.00	31.25	576 p	
60.00	45.00	720 p	
60.00	33.75	1080 i	

عندما تزيد الإشارة المستلمة بالشاشة عن المدى المسموح به سوف تظهر رسالة إنذار على الشاشة يمكن تأكيد نمط الإشارة المدخل من على الشاشة

طريقة استخدام الأسلاك

MINI AV_IN:




MINI COMPONENT_IN:




أعراض العطل	الأسباب المحتملة	الحلول المقترنة
وجود ضبابية في الصورة مع وجود صبّح	1. وجود رخاوة في وصلة جكة اللاقط الهوائي أو وجود أضرار في الكبل. 2. إعدادات القناة غير ملائمة. 3. نوع اللاقط الهوائي غير ملائم. 4. توجيه الهوائي غير مناسب. 5. الإشارة ضعيفة.	1. تفقد حالة الوصلة وتأكد أنها مضبوطة بشكل جيد. 2. راجع إعدادات القناة. 3. راجع نوع الهوائي (UHF/VHF). 4. تأكد من موضع و توجيه الهوائي بشكل جيد. 5. استخدم مقرئ للإشارة ضعيفة.
الصورة جيدة لكن يوجد صبّح	إعدادات الصوت غير مناسبة.	الدخول إلى قائمة التلفزيون، وإعادة ضبط نظام الصوت.
لاتوجد صورة، لا يوجد صوت، المؤشر مطفأ	وجود رخاوة في الوصلة الكهربائية. وأن زر التشغيل الخلفي على وضع التشغيل.	تأكد من أن كبل التغذية موصول بشكل جيد إلى القابس الكهربائي
الصورة تحوي على نقاط عشوائية أو خطوط متداخلة.	إشارة الصورة تتآثر ببعض أصوات التلوين أو مجفف الشعر.	لا تستخدم مجفف الشعر يمكن قريب من الجهاز وقم بإعادة توجيه الهوائي للتنقيل من التداخل.
يوجد خيالات في الصورة.	1. الإشارة التلفزيونية تعكس بواسطة الجبال أو الأبنية العالية. 2. توجيه اللاقط الهوائي غير ملائم.	1. استخدم هوائي ذو موقع مرتفع أكثر وقدرة أعلى على التلقي. 2. قم بإعادة توجيه اللاقط الهوائي بشكل مناسب.
لا يوجد ألوان في الصورة.	1. الإشاعي اللوني متخفض جدا. 2. إعدادات الألوان غير ملائمة.	1. ادخل إلى قائمة إعدادات الصورة لزيادة قيمة الإشاعي اللوني. 2. ادخل إلى قائمة التلقي لتغيير نظام الألوان.
الجهاز لا يصدر أي صوت.	1. مستوى الصوت منخفض جدا. 2. الصوت ملغى. 3. نظام الصوت الفعال غير ملائم.	1. اضبط مستوى الصوت الملام. 2. اضغط على زر (كتم الصوت) الموجود على جهاز التحكم. لتغيير الصوت من جديد. 3. الدخول إلى قائمة التلقي واختيار نظام الصوت الملام.
في حالة الدخل (PC)، لا يوجد إظهار على الشاشة، لا توجد إشارة دخل، المؤشر الأحمر يومض.	تحقق من أن كبل الإشارة موصول بشكل جيد من الطرفين أو قم بتبديله إذا كان فيه مشكلة داخلية.	كبل إشارة الدخل فيه رخاوة. أو فيه تلف.
مسافة الاستجابة لجهاز التحكم عن بعد أصبحت قريبة، وعند تجاوزها لا يستجيب الجهاز لأوامر جهاز التحكم.	1. نافذة المستقبل لجهاز التحكم محجوبة. 2. جيد بطاريات جهاز التحكم متخفض.	قم بازالة جميع العوائق من أمام مستقبل إشارة جهاز التحكم.
الصورة ضبابية في حالة الدخل (PC)	1. ضبط الصورة غير ملائم. 2. نمط الإظهار غير ملائم.	1. استخدم الضبط التقاني للصورة. 2. استخدم نمط الإظهار المفضل.
صورة الدخل (PC) أكبر أو أصغر من حدود الشاشة.	1. ضبط إعدادات الصورة غير ملائم. 2. نمط الإظهار غير ملائم.	1. الدخول إلى القائمة والانتقال إلى إعدادات تحديد القبابات وضبط المستويات الأفقيّة والعمودية للصورة. 3. استخدام نمط الإعدادات المفضل.
إشارة ضبّح عند الإطفاء.	ومضة كبيرة عند إطفاء الشاشة.	حالات طبيعية تحدث عند إطفاء الشاشة.
عوامل خارجية، كالبرق، أو تفريغ الكهرباء الساكنة، وغيرها من العوامل التي قد تتعارض مع عمل الجهاز.	عوازل التغذية الكهربائية الخلفي، والانتظار لفترة دقيقة أو دققان قبل التشغيل مجددا.	عوازل التغذية الكهربائية الخلفي، أو تفريغ الكهرباء الساكنة، وغيرها من العوامل التي قد تتعارض مع عمل الجهاز.

SMART TV / **4K ULTRA HD** / **HDR HIGH DYNAMIC RANGE** / **DLED DIRECT LED**

TriView
Makes Your Dreams Come True

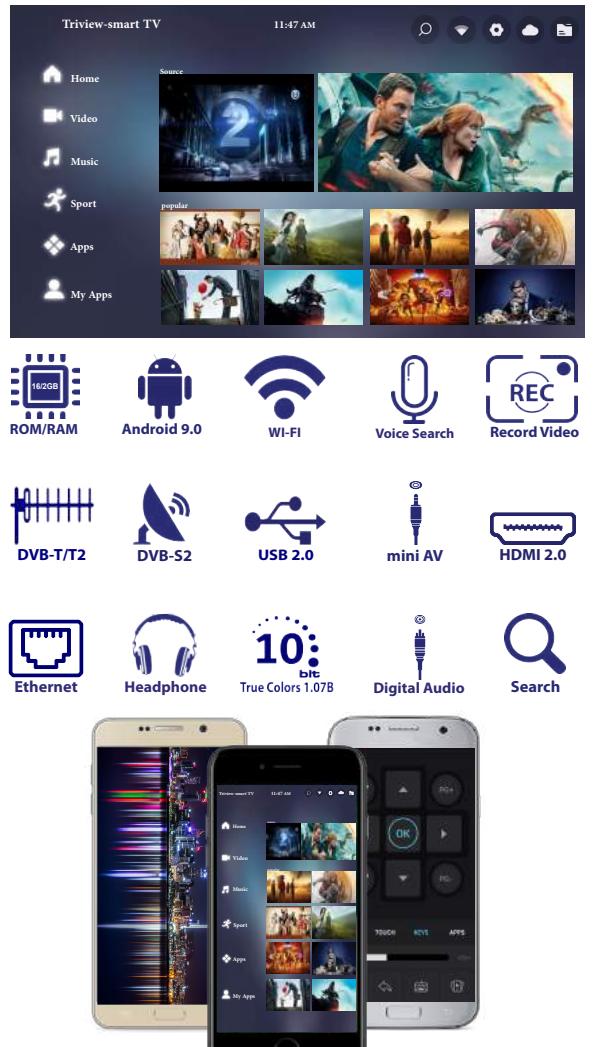

65"
/165cm
DLED

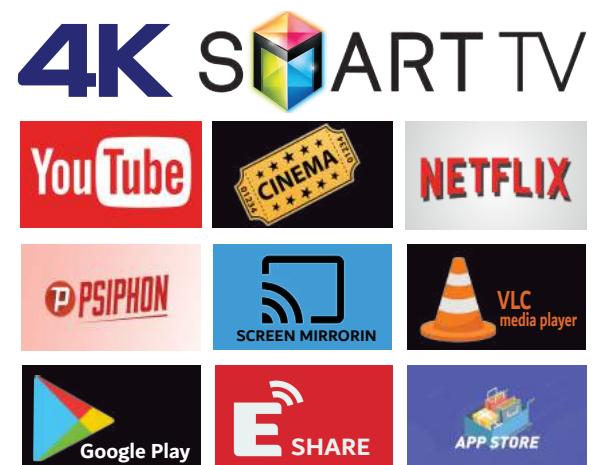

Safety Warning and Notice


Under Following Conditions

- Power failure or unstable voltage.
- Abnormal sound or smell from the device.
- AC power cord is damaged.
- TV set is damaged due to falling off, knock or impact.
- Any liquid or foreign matters enter into the TV set.
- If coal gas or other flammable gases leak, do not unplug the power cord of the TV set or other electric appliances; instead, close the valve of the gas immediately and open the doors and windows.



Warning

Turn off the TV set immediately, unplug the power cord from the power outlet, and contact authorized maintenance personnel.

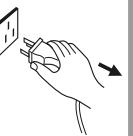

- Only use 100-240VAC, 60/50Hz power supply.
- This TV must be connected to a three pin socket outlet for safety.
- All cables can be connected or pull out only after power supply is turned off.
- Do not fix the TV set on instable position, or else it may cause falling off, damage, or even fire.
- Do not put the TV set in the environment:
 1. With direct sunshine, moisture, overheating, undercooling or heavy dust;
 2. With flammable or explosive substance;
 3. With flammable or corrosive gas;
 4. In bathroom, kitchen, etc.
- Do not use damaged or improper power socket, and ensure that the plug and socket are connected properly.
- Keep the power plug and socket free of dust and metal pieces.
- Do not damage the power cord:
 1. It is prohibited to refit the power cord;
 2. Do not put heavy object on the power cord;
 3. Keep the power cord away from heat source;
 4. Do not drag the power cord when unplugging.
- Do not connect too many appliances to one power strip, or else it may cause fire due to high power consumption.
- Do not let open flame approach the TV set, or else it may cause electric shock or fire.
- Do not penetrate any sharp object, metal or liquid into the signal connector or air vents, to avoid short circuit and product damage as well as electric shock.
- Motionless picture might cause permanent destruction to the display. Be sure not to display motionless picture on the LED TV for more than 2 hours, because it would cause picture remnants to appear, which is called "screen burns". To avoid such picture remnants, please decrease the "contrast" and "brightness" of the display when displaying motionless picture.
- While watching TV program in 4:3 size mode for a long time, there would be traces on the edge of the screen's left, right and center parts because of different transmission of the light on the screen. Similar impact on the screen will occur when playing DVD or connecting games control. Products destroyed by these reasons can't be guaranteed for maintenance.
- Do not touch the plug with wet hands, or else it may cause electric shock.
- Do not turn on the TV set in thunderstorm weather; instead, unplug the power plug and antenna connector to avoid lightning strike.
- Do not disassemble the TV set by yourself, or else it may cause electric shock or fire. Contact qualified personnel for maintenance.

Contents

Features	1
Safety warning and notice	1
Safety Precautions	3
Packing list	4
Mounting the TV set	4
Inputs and Outputs	5
Panel Control Keys	5
Remote Control	6
Basic Operations	7
Applications	8
About Device	10
picture setup	11
sound setup	12
channel setup	13
settings	14
Time Setup	15
Lock setup	16
troubleshooting	16
technical specifications	17

Features

1. DLED panel with no glint and low radiation can ease eyes' fatigue and protect eyes.
2. High-quality DLED with DLED backlight panel is adopted with high brightness, high contrast, wide viewing angle, and super fast response time. Super fast response time can greatly eliminate the shadow of moving images.
3. TV/Monitor with two in one and multiple input ports can easily switch among the modes.
4. De-interlacing image disposal is adopted. Today's most advanced technique for movement compensation, can completely improve the saw tooth and vague edges of the athletic picture.
5. There are four smart sound modes and four smart image modes.
6. Dynamic contrast technology can obviously improve the definition and contrast of the picture
7. Tuner for frequency synthesis can support full auto search and manual search.
8. With perfect timing function, you can set time to turn off. It will be turned off in state of no signals, too.
9. It contains an internal receiver and therefore there are no additional connection wires, which makes the device look beautiful, whether it is installed on the wall or placed on the bases.
10. The internal receiver is characterized by high picture and sound quality
11. Support hi-definition 4k
12. All functions can be realized with remote control, which is really a convenient operation.
13. Power is designed to save energy.
14. Input ports include HDMI, CI, USB , DVB-S2, DVB-T/T2, RJ45.
15. Supports USB interface. USB Support Full HD Streaming media.
16. Ultra-thin and super narrow design .

Safety warning and notice

Thank you to choose the LED TV with LED backlight made by our TriView company, a valuable product with excellent quality and multiple functions. This machine will bring you more audiovisual enjoyment. Its design can insure user's safety. All machine are strictly tested before leaving factory. But incorrect use can lead to electric shock or fire. In order to ensure safety and extend its life, please read the manual and marking label carefully before using it and comply with the following safety instructions. Please keep the user manual for later use.

	Warning	May result in casualties
--	---------	--------------------------

	Indicate the behaviors that must be prohibited
--	--

	Attention	May result in personal injury or property losses
--	-----------	--

	Indicate the operations that must be performed
--	--


Mounting and Connecting

Packing list


1. The TV set; 2. User Manual; 3: Remote control; 4: Magic Mouse

Mounting the TV set


Insert the base into the support hole in the rear enclosure in the arrow direction shown in the picture, aligning the screw hole in the rear enclosure and the screw hole in the base, and then tighten the screw.

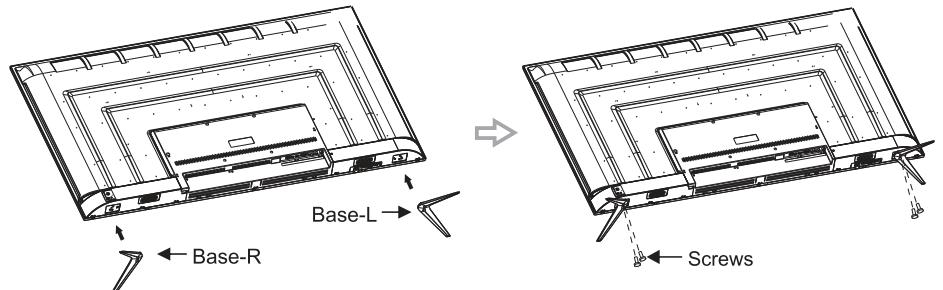

- The TV set should be mounted near the AC power socket for easy plugging and unplugging.
- For your safety, please select appropriate wall mount bracket or base.
- To avoid hurt, it is required to place the TV set on stable plane, or fix on firm wall.
- Ask qualified personnel to mount the TV set on the wall. Improper mounting may result in instable TV set.

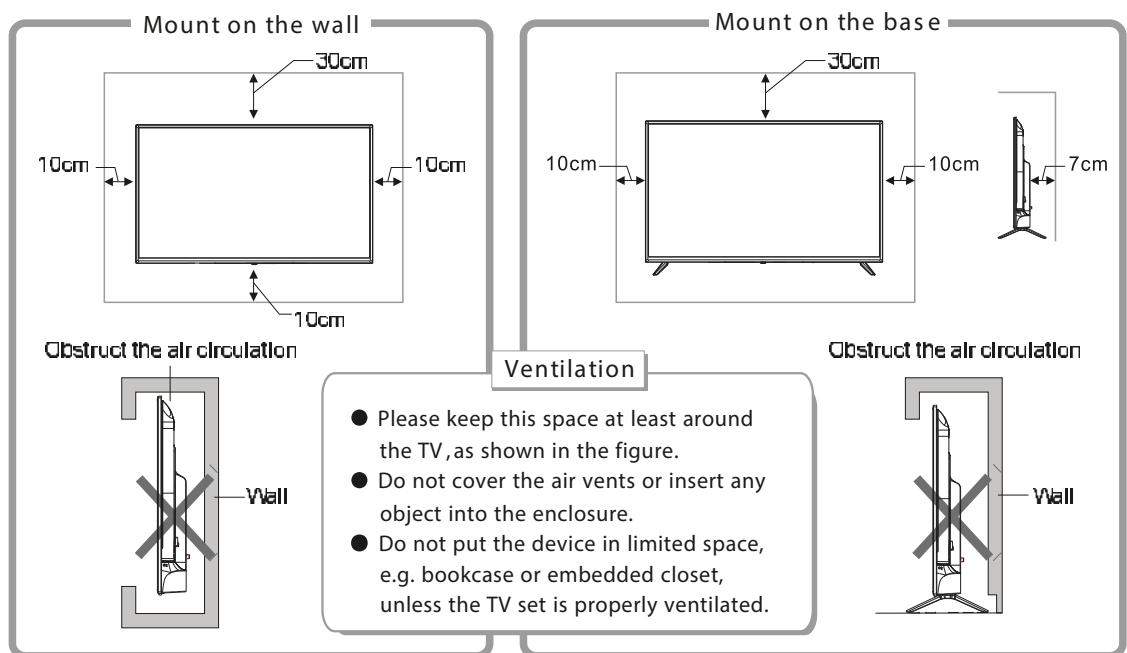


Safety warning and notice

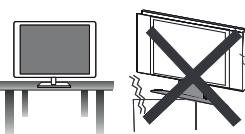


Place the TV on a firm and flat surface

Ensure the TV is positioned close to the wall to avoid it falling when pushed.


Do not use the TV set with others fixations than those provided or suggested by the manufacturer.



When you turning the TV set, do not hold the top side of the TV set, you should hold the bottom side.




When you lifting the TV set, do not use one hand to handle it, you should lift the TV set by two hands.



Do not place any material on the TV set

Do not put the container filled with water on the TV set, to avoid electric shock or fire caused by water drop of splashing.

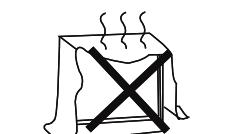

Do not block or cover the ventilation openings on the monitor

The slots on the case is designed to release heat so as to assure that all inside components will not reach an extra high temperature and can work normally for a long time. Please do not cover the holes while place it.

Power cord and cables must be properly routed and protected to prevent people from stepping on them and causing the TV set to fall.



Keep the TV set dry and away from humidity.



Keep the TV set away from heat sources.




Unplug the TV set before cleaning it. Do not use solvents or liquids to clean the TV set. Only clean the TV set with a soft and dry cloth.

In case of troubleshooting, does not use spare parts other than those suggested by the manufacturer. Using inadequate spare parts can lead to electric shocks short-circuits fire or other incidents.



Unplug the TV during lighting storms or when unused for long periods of time.

Remote Control

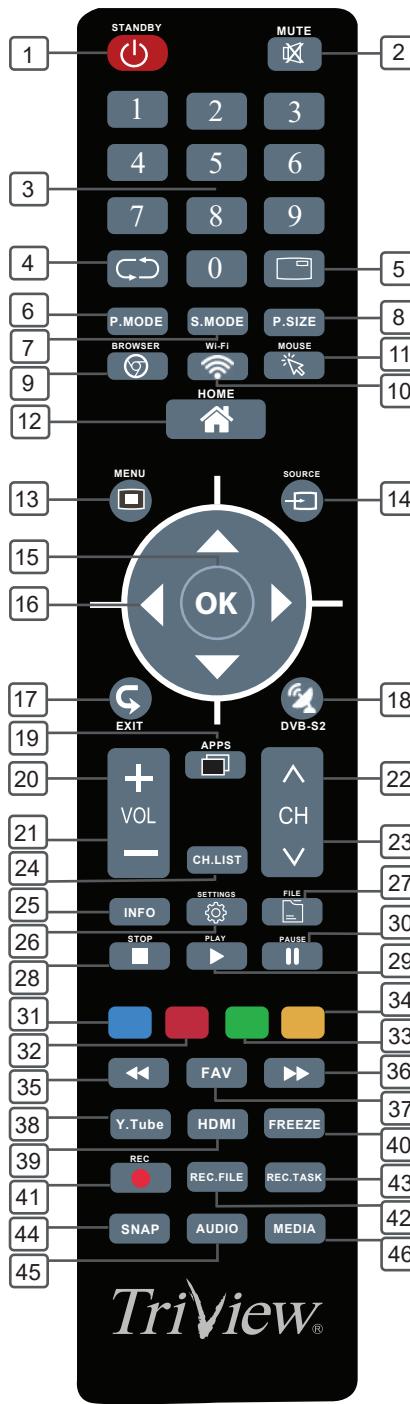


1. STANDBY : Standby turn on and off.
2. MUTE : Mute sound.
3. 0-9 : Continue to press the keys to select a channel.
4. RECALL : Return to previous channel.
5. EPG : Programs guide.
6. P.MODE : Select the picture mode.
7. S.MODE : Select the sound mode.
8. P.SIZE : Select the picture size.
9. BROWSER : Open chrome apk.
10. WI-FI : Operate/not operate wi-fi.
11. MOUSE : Active/not active mouse mode.
12. HOME : Return to home screen.
13. MENU : Enter or exit menu.
14. SOURCE : Select the signal source.
15. OK : Confirm or enter.
16. TRANSFER KEYS : The menu item selection.
17. EXIT : Exit menu or operation.
18. DVB-S2 : Open DVB-S2 source
19. APPS : Show background apps.
20. VOL+ : Increase the volume.
21. VOL- : Decrease the volume.
22. CH+ : Select the channel forward.
23. CH- : Select the channel backward.
24. CH LIST: Channel list.
25. INFO : Source information.
26. SETTING : Open setting.
27. FILE : Open file browser.
28. STOP : Stop playing.
29. Play.
30. Pause.
31. BLUE : Access the blue item or page.
32. RED : Access the red item or page.
33. GREEN : Access the green item or page.
34. YELLOW : Access the yellow item or page.
35. FB : Fast backward.
36. FF : Fast forward.
37. FAV : Open favourite menu.
38. YOUTUBE : Open youtube apk.
39. HDMI : Open HDMI source.
40. FREEZE : Freeze the Image.
41. REC : Start Recording.
42. REC File : Open Record Files.
43. REC Task : Open Record Task.
44. SNAP : Screenshot.
45. AUDIO : Select Audio Track.
46. MEDIA : Open media center.

Mounting and Connecting


After connected, press "SOURCE" key, then menu of signal source will be displayed on the screen.
Press the "▲/▼" key to select the input signal, and press "OK" key to confirm.
The connecting mode is shown in the figure.

Warning


When connecting outdoor antenna to signal port of the TV set, please turn off the main power switch of the TV set first. Do not approach the outdoor antenna to high voltage mains power line to avoid electric shock. The wired network antenna connected to this TV set must be isolated from the protective grounding, or else it will cause fire or other hazards.

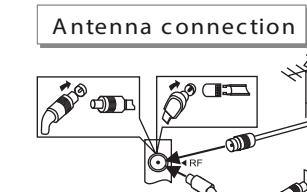

- | | |
|--|-------------------------|
| 1. Audio Out (Headphone) | 7. HDMI2 |
| 2. Digital Audio Input(COAX) | 8. HDMI3 |
| 3. Digital Video Broadcasting-Terrrestrial | 9. USB |
| 4. Digital Video Broadcasting-Satellite | 10. Ypbpr |
| 5. Network (Ethernet in) | 11. Common Interface CI |
| 6. HDMI 1 | 12. AV mini Input |
| | 13. USB |

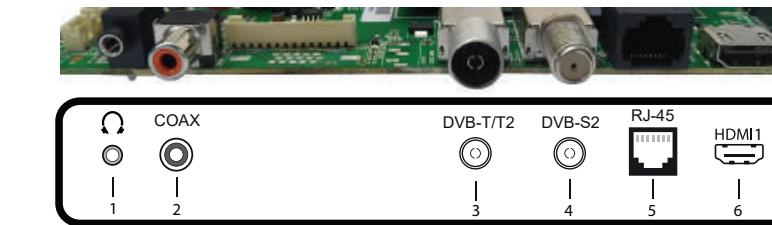


Panel Control Keys

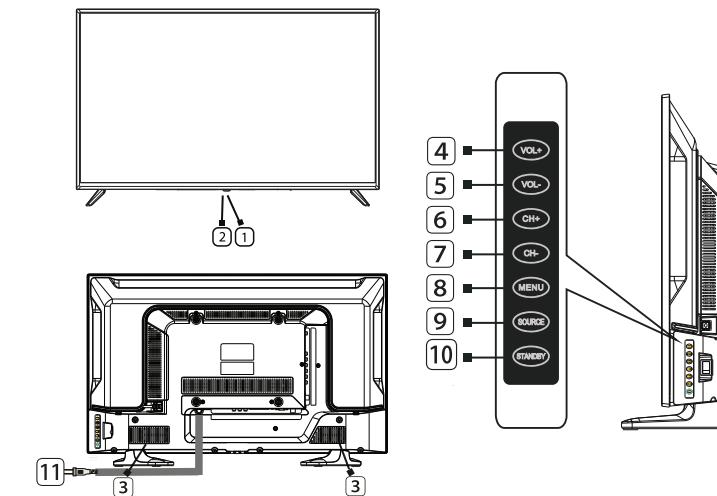

1. Remote sensor window
2. Power indicator
3. Speaker
4. Volume "+" key
5. Volume "-" key
6. Program "+" key
7. Program "-" key
8. Menu key
9. Source key
10. Standby key
11. Power plug input

TV OPERATION AND SYSTEM SETUP

- Press **MENU** button to display the MAIN OSD MENU;
- Press **▲/▼** button to select the MENU you want;
- Press **ENTER** button or **▶** button to enter the sub menu, and press **◀** button to return back to the previous menu.
- Press **▲/▼** button to select the option and then press **ENTER** button or **▶** button to enter the submenu, press **◀/▶** button to adjust the value or press **◀/▶** button to select in the sub menu;
- You can press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

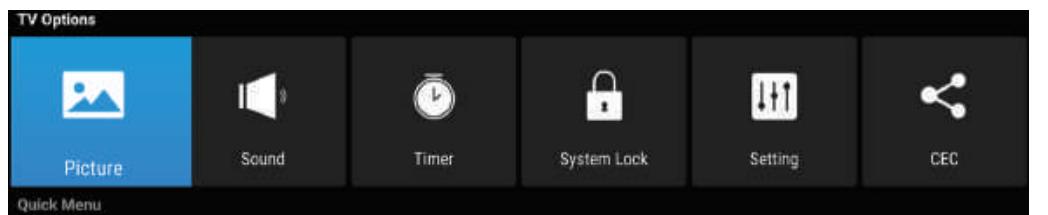

Press **INFO** button on the remote control to display program information.

1. Current program Number.
2. The NICAM mode of current program.
3. The sound system of current channel could be changed on **Analog Manual Search** Menu.



Remote Control

Installing battery

Remove the battery cover, and insert two AAA (1.5V) batteries; make sure that the polarity of the battery is consistent with the marks "+/-" in the battery slot.

Precautions of remote control usage

- Point the remote control to the receiver window. The objects between remote control and the receiver window may disturb the normal operation.
- Keep the remote control away from strong vibration. In addition, do not set or put the remote control in direct sunshine, which may result in deformation of the remote control.
- The remote control may be invalid if the receiver window is in direct sunshine or strong light; in this case, please adjust the angle of the light or the device, or approach the remote control to the receiver window.
- The effective range of the remote control may be affected if the battery voltage is low; in this case, please replace with a new battery; if the remote control won't be used or battery voltage is too low, please take out the battery to avoid corrosion due to battery liquid leakage.
- Do not mix different types of batteries, or used and new batteries.
- Do not throw the batteries into fire, charge or break up, or charge, short circuit, disassemble, heat or burn the used batteries. Please follow the environmental protection regulations to disposal of the batteries.
- Remove batteries when the remote is not used for a long time.

TV OPERATION AND SYSTEM SETUP

SELECT INPUT SOURCE

Press **SOURCE** button to display the input source list;


Press **▲▼** button to select the input source you want to watch;

Press **ENTER** button to enter the input source;



TV OPERATION AND SYSTEM SETUP

TIPS: You can press **P-MODE** button on the remoter control again and again to change the picture mode directly.

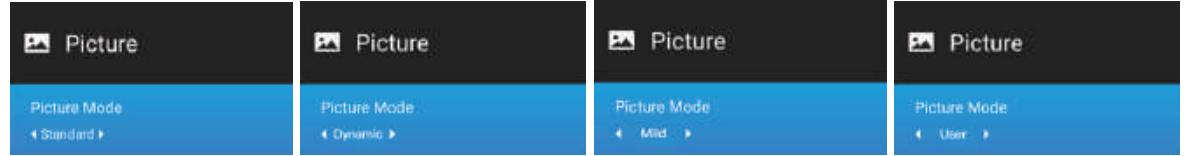

5.1.2 Aspect Ratio

Press **▲/▼** button to select Aspect Ratio, then press **ENTER** button to enter and press **◀/▶** button to adjust. Then press **MENU** button to return back the previous menu directly.

5.1.3 Colour Temperature

Press **◀/▶** button to select **Colour Temperature**, then press **ENTER** button to enter and **▲/▼** button to select Standard, Cool, Warm.

5.1.4 DNR

Press **◀/▶** button to select **DNR**, and then press **ENTER** button to enter and **◀/▶** button to select Off, Low, Middle, High.

5.2 SOUND Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.

Press **▲/▼** button to select **Sound** in the main menu, and then press **ENTER** button or **▶** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Sound menu, then press **ENTER** button to enter.
2. press **◀/▶** button to adjust or press **▲/▼** to select, and press **ENTER** button to select submenu.
3. After finishing your adjustment, Press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

TV OPERATION AND SYSTEM SETUP


5.1 Picture Menu

The picture is for a reference only; the actual item is the standard.

Press **TV MENU** button to display the main menu.

Press **▲/▼** button to select **Picture** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the Picture menu, and then press **ENTER** button or **▶** button to enter.
2. Press **◀/▶** button to adjust or press **▲/▼** button to select. And press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, and press **EXIT** button to exit the entire menu.

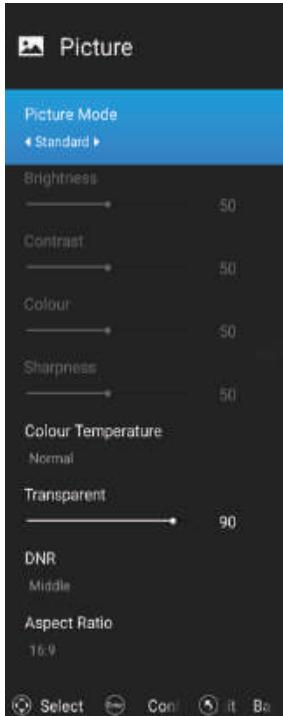

5.1.1 Picture Mode

Press **▲/▼** button to select Picture Mode, then press **ENTER** button to enter and press **◀/▶** button to select. (Available Picture Mode: User , Standard, Dynamic,Mild)

You only can change the value of brightness, contrast, sharpness, color, when the picture is in User mode.

TV OPERATION AND SYSTEM SETUP

◀/▶ button to select.

(Available SPDIF mode: RAW, PCM, OFF)

Then press **ENTER** button or ▶ button to enter and press ◀/▶ button to adjust, then press


MENU button to return back the previous menu directly.

5.3 Timer Menu


5.3.1 OSD Timer

5.3.2 Sleep Timer

5.3.3 Auto Power Down

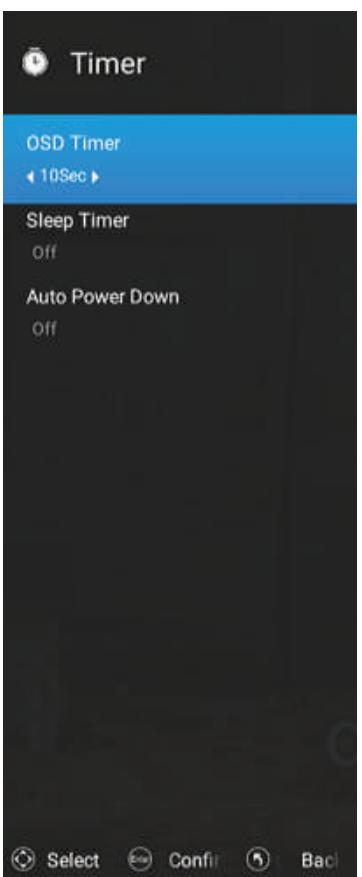

TV OPERATION AND SYSTEM SETUP

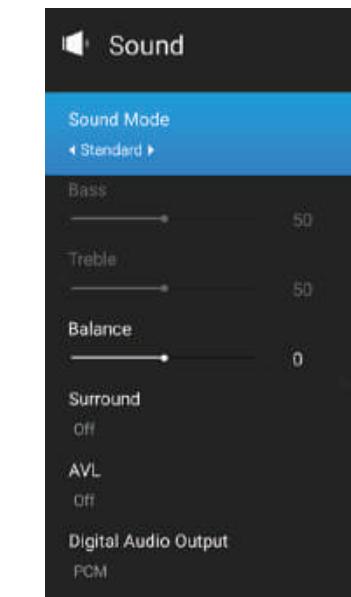


5.2.1 Sound mode

Press ▲/▼ button to select **Sound mode** and then press **ENTER** button to enter. And then press ◀/▶ button to select. (Available Sound mode: User, Standard, Music, cinema).

You can change the value of bass and treble, Balance and EQ, when the sound is in User mode.

TIPS: You can press **S-MODE** button on the remote control to change the Sound Mode directly.

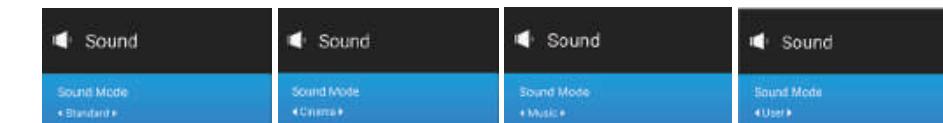

5.2.2 Balance

Press ▲/▼ button to select Balance, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.3 Surround

Press ▲/▼ button to select surround, then press **ENTER** button to enter and press ◀/▶ button to adjust. Then press **MENU** button to return back the previous menu directly.

5.2.4 AVL

Press ▲/▼ button to select **AVL**, then press **ENTER** button to enter and press ◀/▶ button to adjust. It can only be adjusted under user mode. Then press **MENU** button to return back the previous menu directly.

5.2.5 Digital Audio output

Press ▲/▼ button to select **SPDIF Output**, then press **ENTER** button to enter and press

5.4 System lock

5.4.1 System Lock

5.4.2 Source lock

5.4.3 Channel lock

5.4.4 Program Restrictions

TV OPERATION AND SYSTEM SETUP

5.5.1 Menu Language

Press **▲/▼** button to select **Menu Language**, and then press **◀/▶** to select On or Off.

5.5.2 Location

Press **▲/▼** button to select **Location**, and then press **◀/▶** to select.

5.5.3 Power Default Source

Press **▲/▼** button to select **Power Default Source**, and then press **◀/▶** to select On or Off.

5.5.4 Reset TV

Press **▲/▼** button to select **Reset TV**, and then press **ENTER** button to enter

5.6 CEC

5.6.1 HDMI CEC Setup


5.6.2 Device Auto Power Off

5.6.3 TV Auto power on

5.6.4 CEC device list


5.6.5 Amplifier Support ARC

5.6.6 Speaker Preference

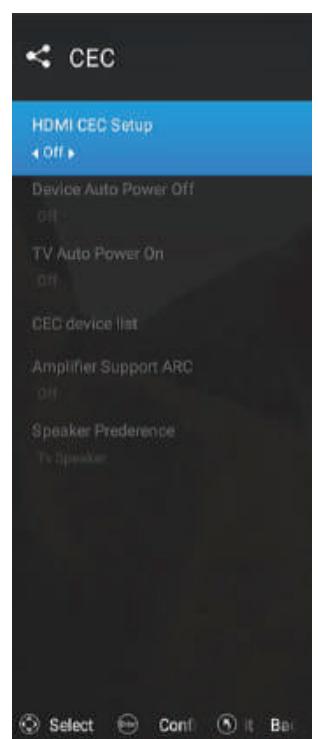

TV OPERATION AND SYSTEM SETUP

5.4.5 Change PIN

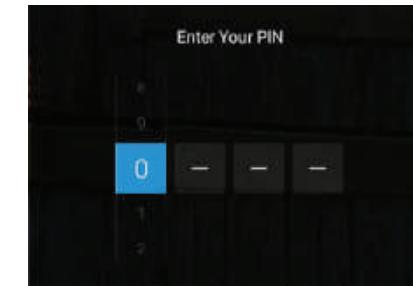


5.5 Setting Menu

The picture is for a reference only; the actual item is the standard.


Press **MENU** button to display the main menu.

Press **▲/▼** button to select **SETTING** in the main menu, and then press **ENTER** button to enter.

1. Press **▲/▼** button to select the option that you want to adjust in the **SETTING** menu, and then press **ENTER** button to enter.
2. Press **◀/▶** button to select and press **ENTER** button to select the sub menu.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu, or press **EXIT** button to exit the entire menu.

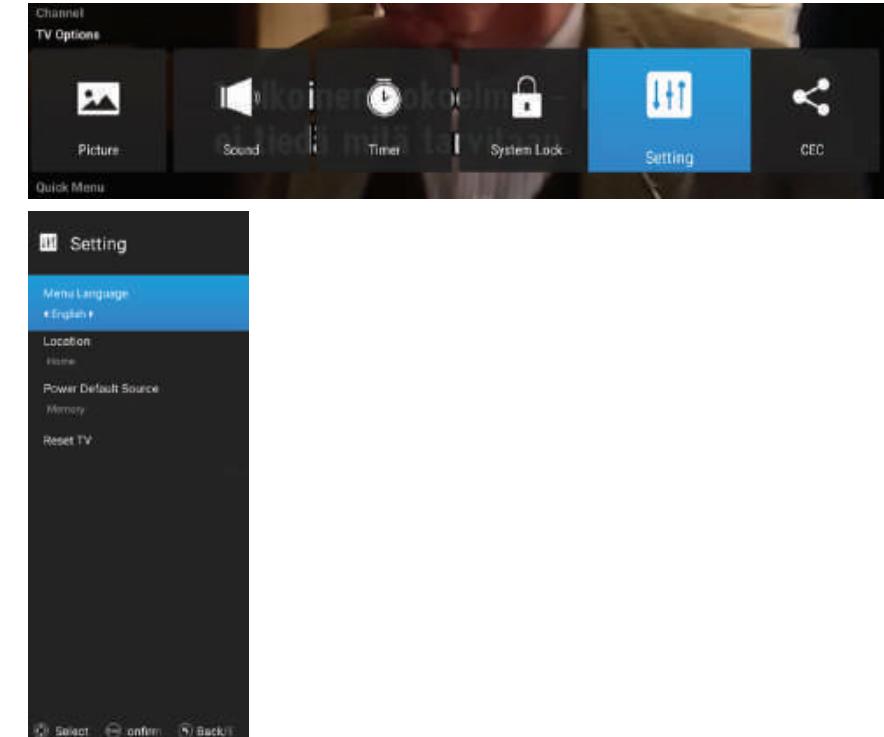


TV OPERATION AND SYSTEM SETUP

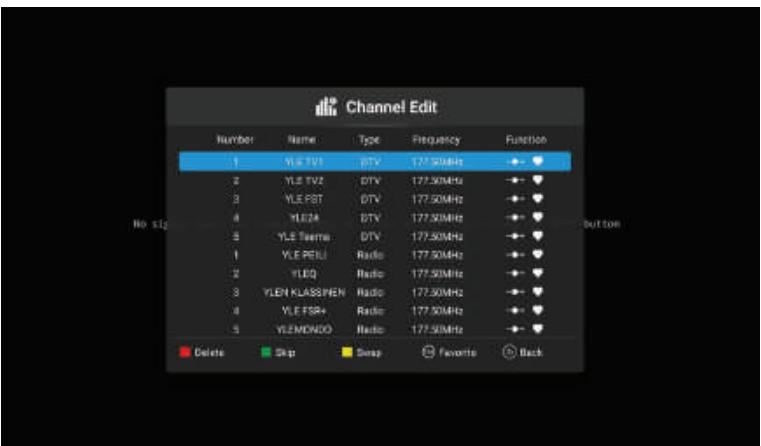

5.7.3 Country or Region(Germany)

Press ▲/▼ button to select **Country and Region**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

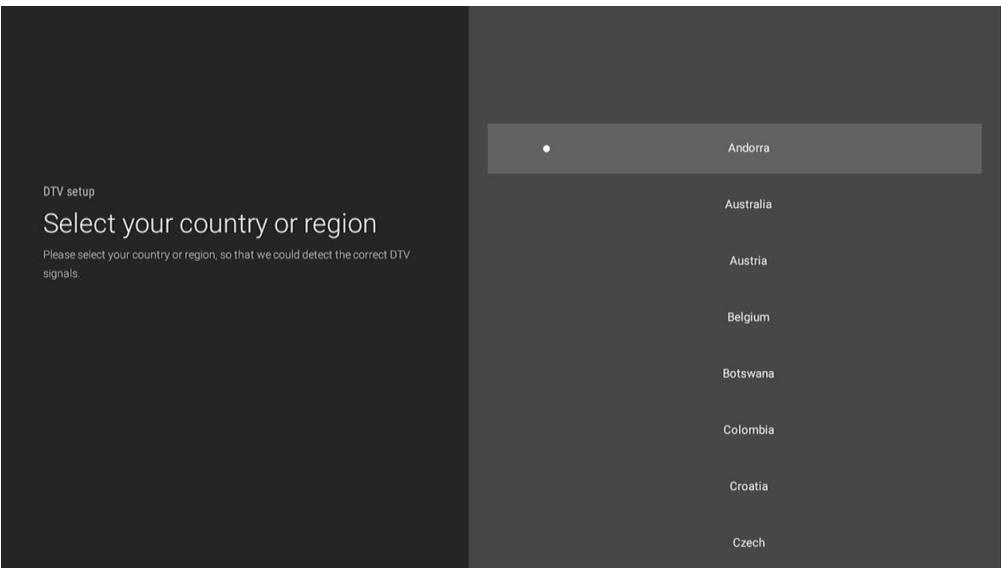

5.7.4 Auto Tuning

Press ▲/▼ button to select **Auto Search**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:


TV OPERATION AND SYSTEM SETUP

5.7 Channel Menu

The picture is for a reference only; the actual item is the standard.

Press **MENU** button to display the main menu.


Press **▲/▼** button to select **Setup** in the main menu, then press **ENTER** to enter.

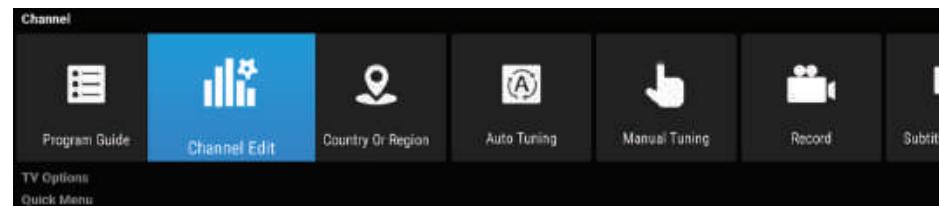

1. Press **▲/▼** button to select the option that you want to adjust in the **Setup** menu, then press **ENTER** or **►**button to enter.
2. Press **◀/▶**button to adjust or press **▲/▼**button to select.
3. After finishing your adjustment, press **MENU** button to save and return back to the previous menu and press **EXIT** button to exit the entire menu.

5.7.1 Program Guide

1. In the DTV source,you can start channel information function by pressing **Program Guide** button on the remote control.. The prompt window will appear as follows:

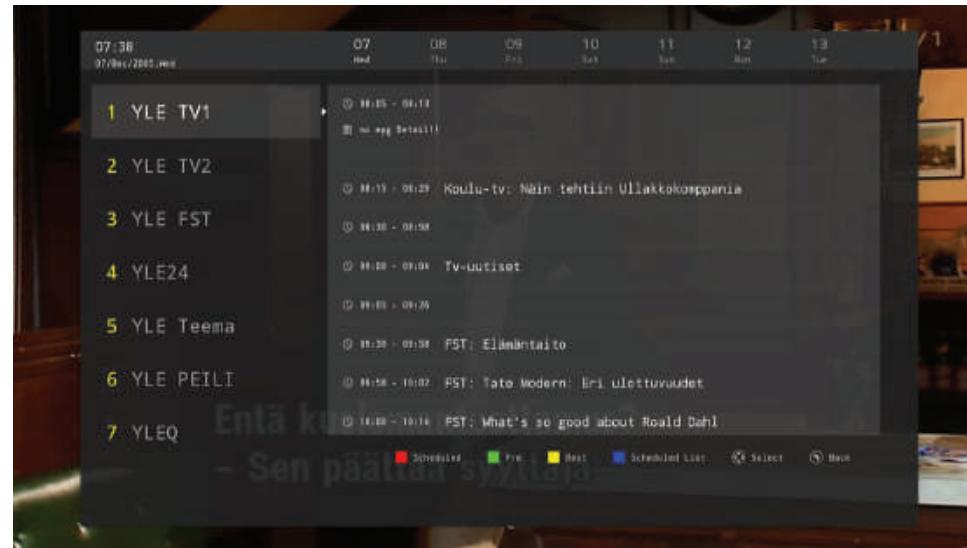


5.7.2 channel Edit

Press **▲/▼** button to select **channel Edit**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:


Select to open the auto searching page, and press Enter button to start the scan.

TV OPERATION AND SYSTEM SETUP

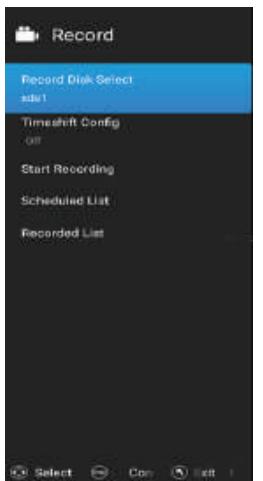


5.7.7 Subtitle Language

Press **▲/▼** button to select **Subtitle Language**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

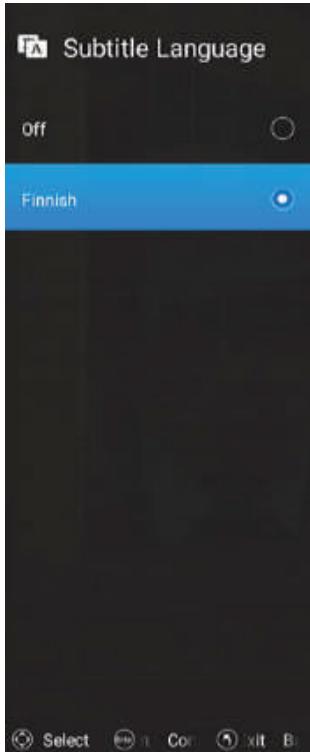


TV OPERATION AND SYSTEM SETUP

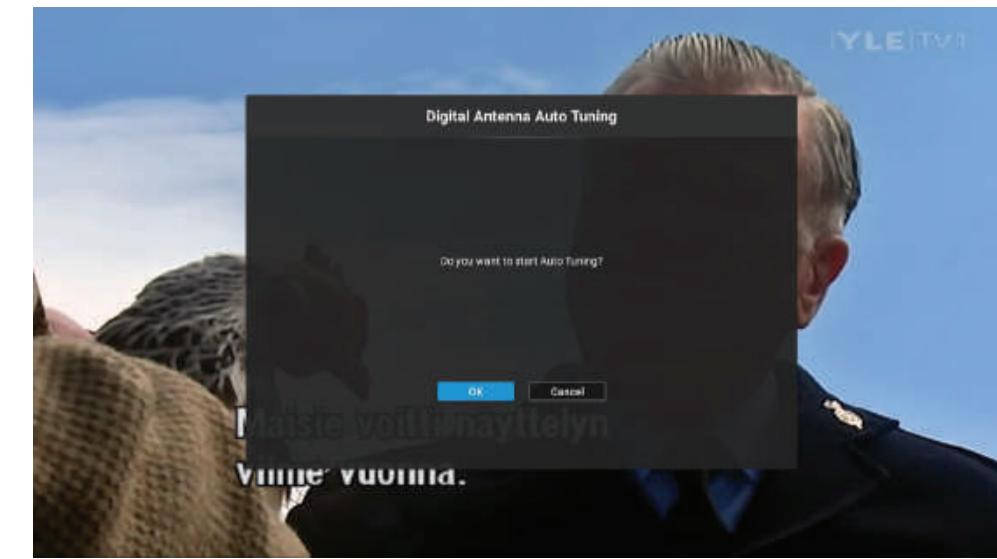

5.7.5 Manual Tuning

Press **▲/▼** button to select **Manual Tuning**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

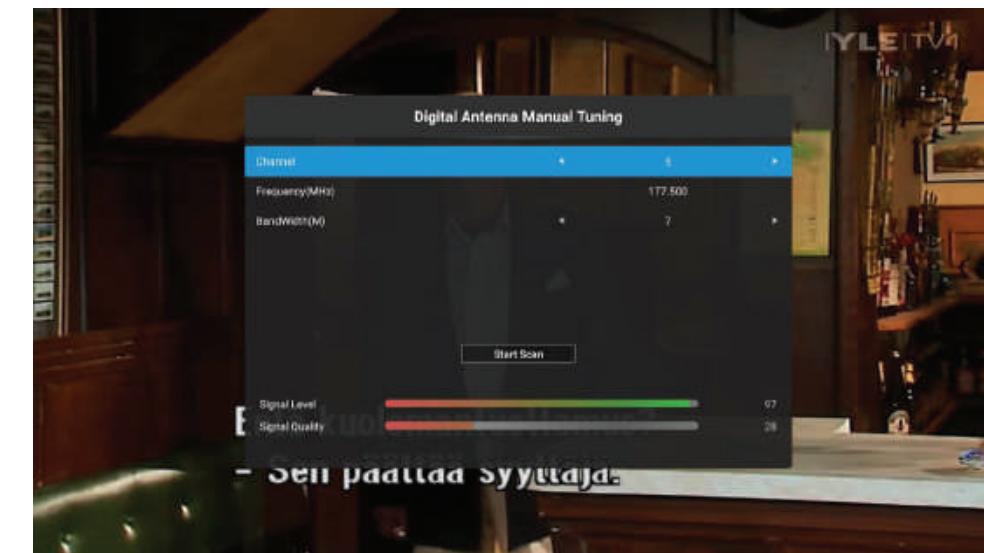


5.7.6 Record menu

Press **▲/▼** button to select **Record menu**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:


TV OPERATION AND SYSTEM SETUP

5.7.9 DTV Setting

Press ▲/▼ button to select **DTV Setting**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

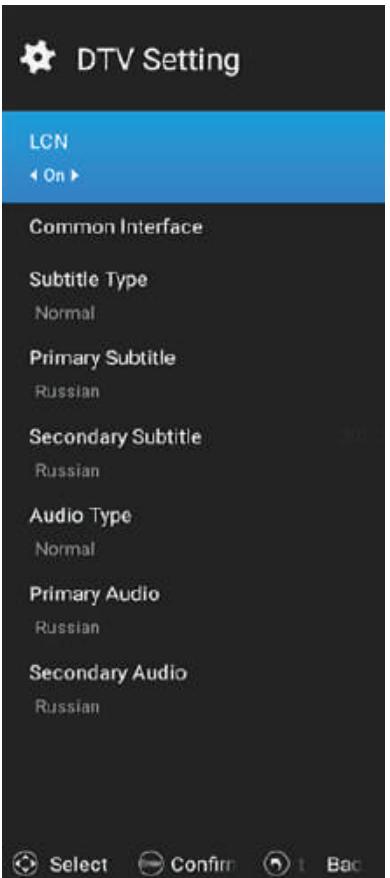


5.8 Quick Menu

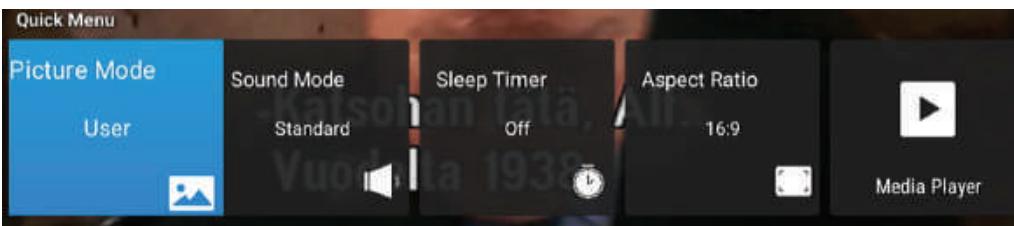


TV OPERATION AND SYSTEM SETUP

5.7.8 Multi Audio



Press ▲/▼ button to select **Multi Audio**, and then press **ENTER** button to play the channel selected. The menu will appear as follows:

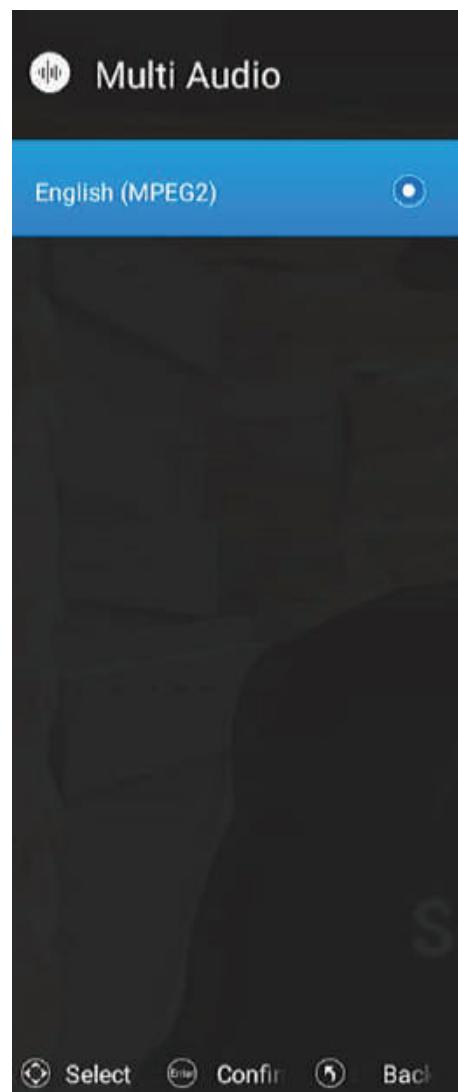

Home

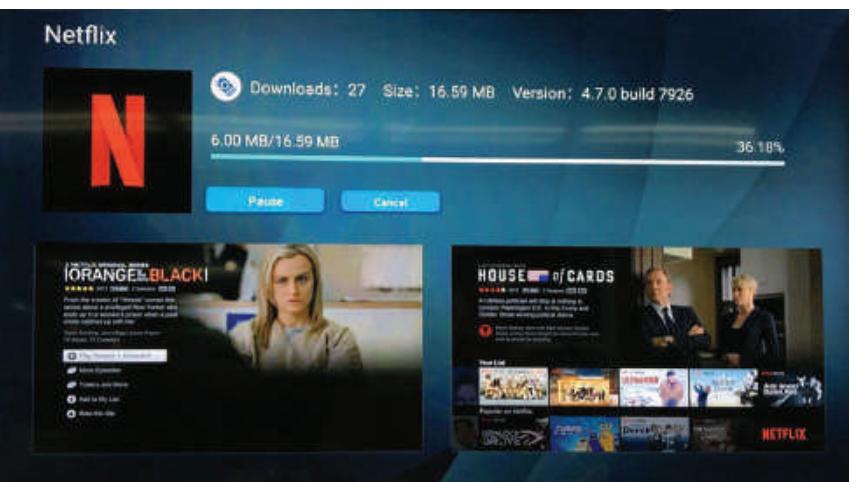

you can also select Browser to search the internet, As the figure shows.

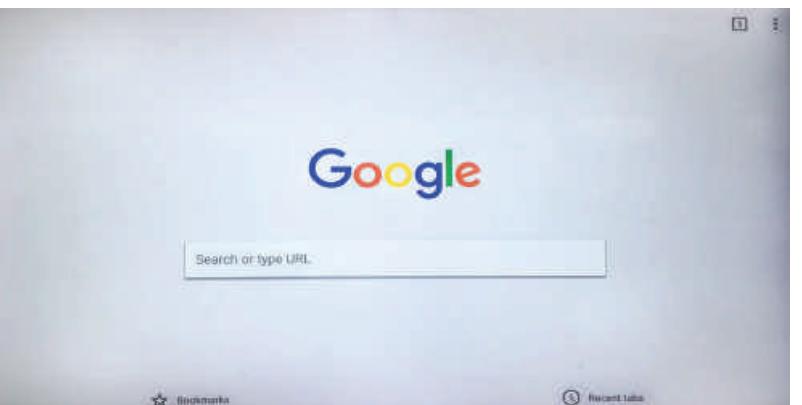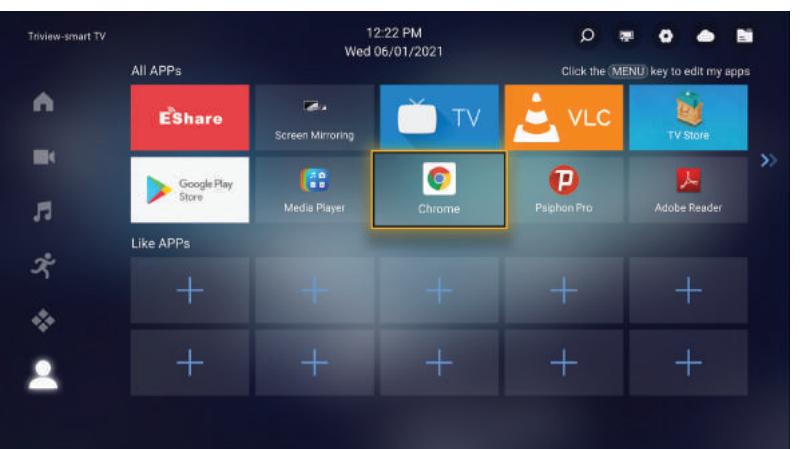


Home


6.1 Apps

The picture is for a reference only; the actual item is the standard.

Press ▲/▼ button to select APPS in the Source Menu, and then press ENTER or ► to enter.

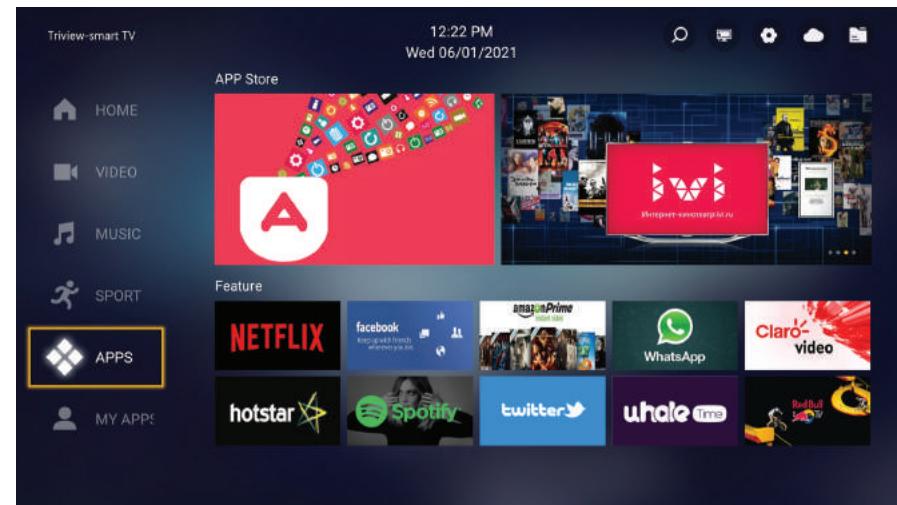

you can button to select Tv Store to download apps what you want, As the figure shows.

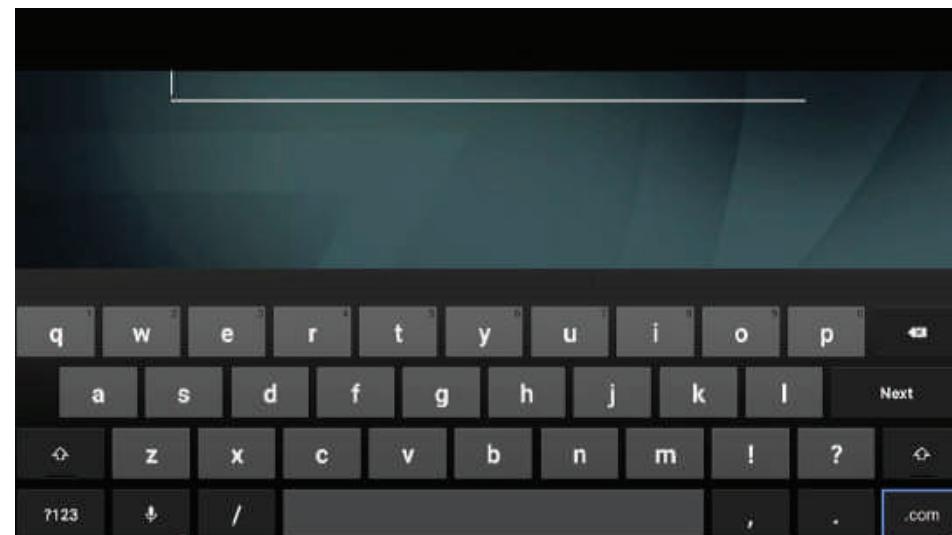

Home

6.3.1 Photo


The picture is for a reference only; the actual item is the standard.
Press **◀/▶** button to select **Music** in the main menu, and then press **ENTER** button to enter.
Press **EXIT** button to return back to the previous menu.



Home


6.2 TV

The picture is for a reference only; the actual item is the standard.
Press **▲/▼** button to select **TV** in the **Source Menu**, and then press **ENTER** or **▶** to enter.

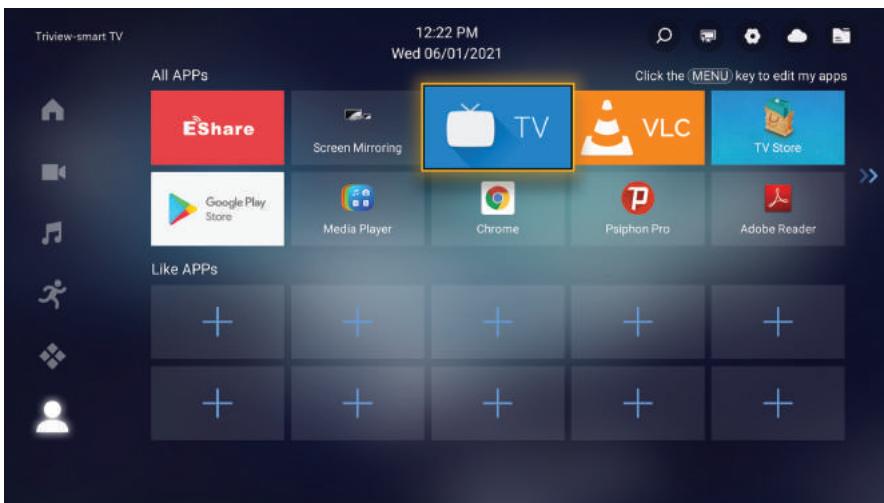


6.3 MEDIA OPERATION


The picture is for a reference only; the actual item is the standard.
Note: Before operation **MEDIA** menu, Plug in USB device or memory card, then press **SOURCE** button to set the Source to Media.
Press **▲/▼** button to select **MEDIA** in the **Source Menu**, and then press **ENTER** or **▶** to enter. You can also enter the Media by pressing **MEDIA** button on the remote control.

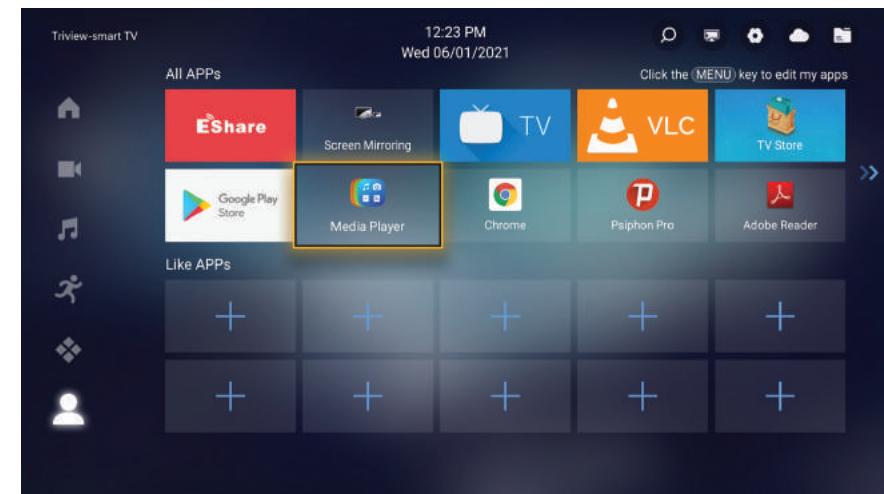

Home

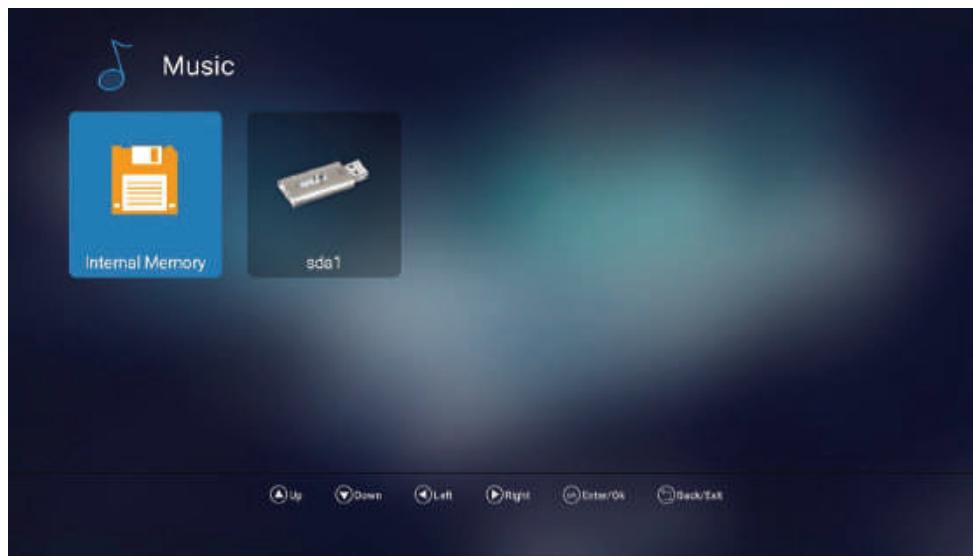

You can see the information of the current playing sonny at the left of the menu.

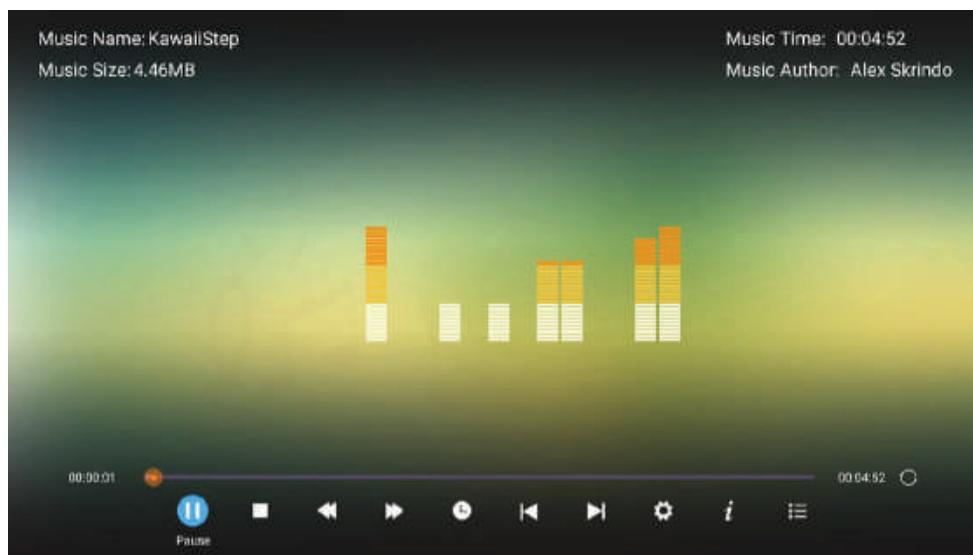

Home



You can see the information of the current playing photo after press **INFO** button, then press **▶||** button to play or pause, you can see the playing state in the right.

Then press **◀/▶** or **▲/▼** button to ratite the picture.


Notes: Other menu and description are the same as that for Movie menu.

6.3.2 Music


The picture is for a reference only; the actual item is the standard.

Press **◀/▶** button to select **Music** in the main menu, and then press **ENTE** **Button** to enter.

Press **EXIT** button to return back to the previous menu.

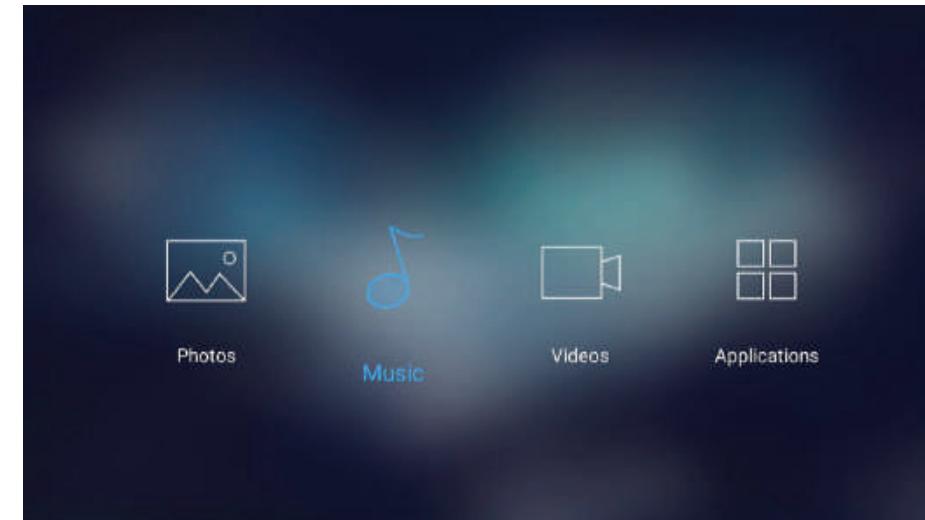

Home

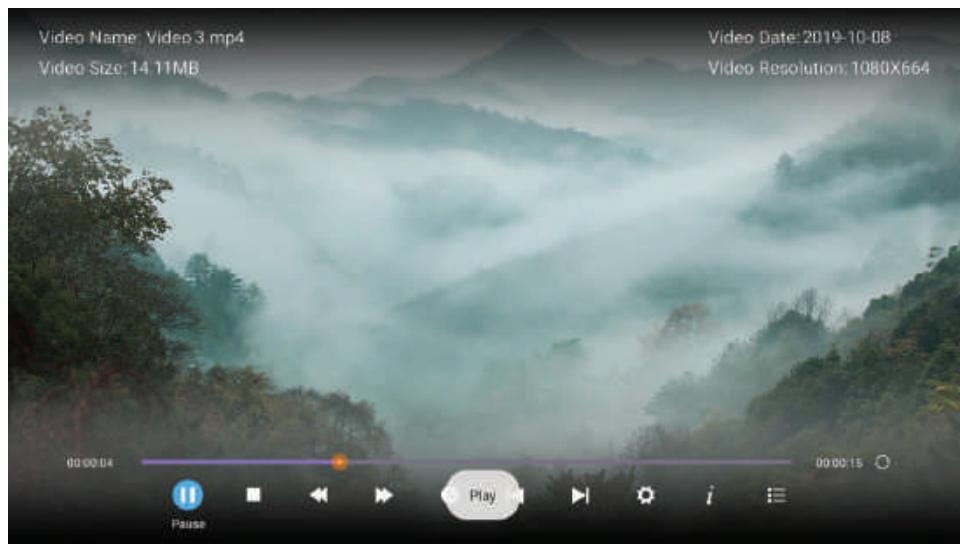

Press ENTER button or ▶|| button to play.

Press ■ button or EXIT button to stop playing.

Press the ◀ button to return back to previous page.

You can see the information of the current playing media at the first few second or after press INFO button.

Home

6.3.3 Video

The picture is for a reference only; the actual item is the standard.

Press ◀/▶ button to select **Video** in the main menu, then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.



Press ▲/▼ button to select the folder that you want to view.



Press **ENTER** button to select the sub folder.

6.3.4 Applications

The picture is for a reference only; the actual item is the standard.


Press ◀/▶ button to select **Video** in the main menu, then press **ENTER** button to enter.

Press **EXIT** button to return back to the previous menu.

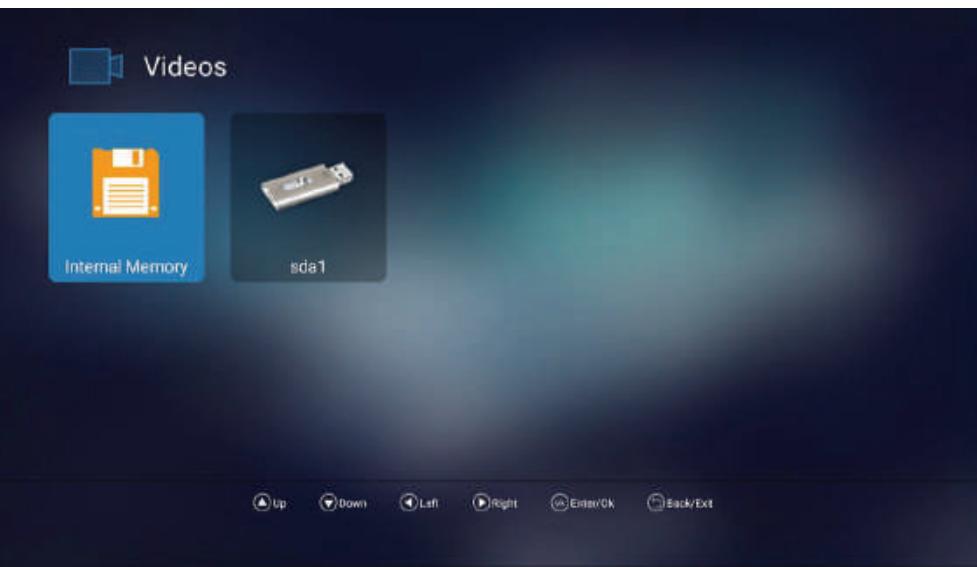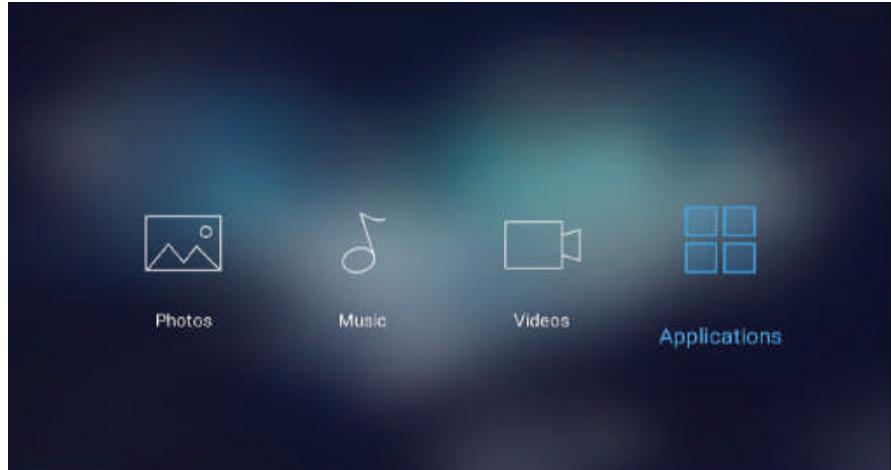

Home

6.4.2 Time Setting

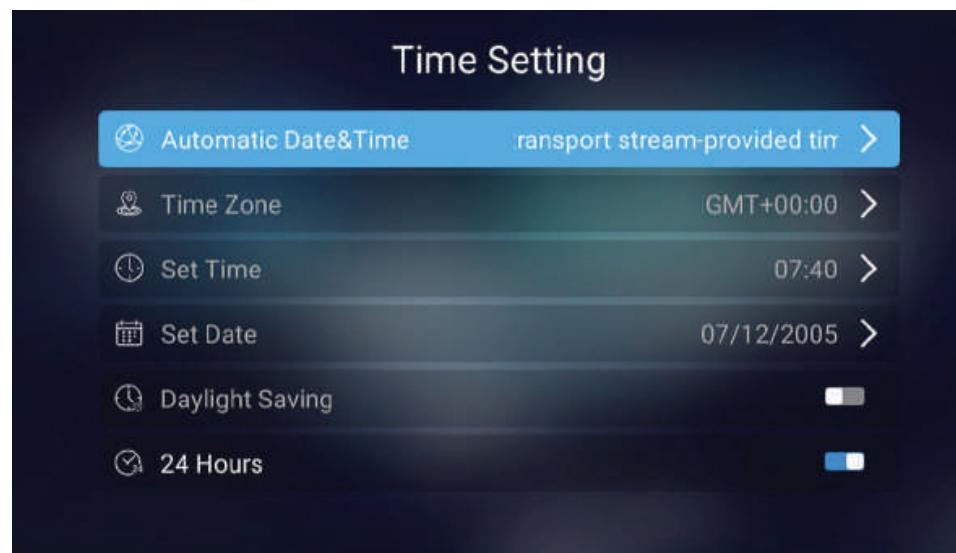

6.4.3 Common



Home


6.4 Setting

The picture is for a reference only; the actual item is the standard.


Press ▲/▼ button to select **Setting** in the **Source Menu**, and then press **ENTER** or ► to enter.




6.4.1 Network Setting

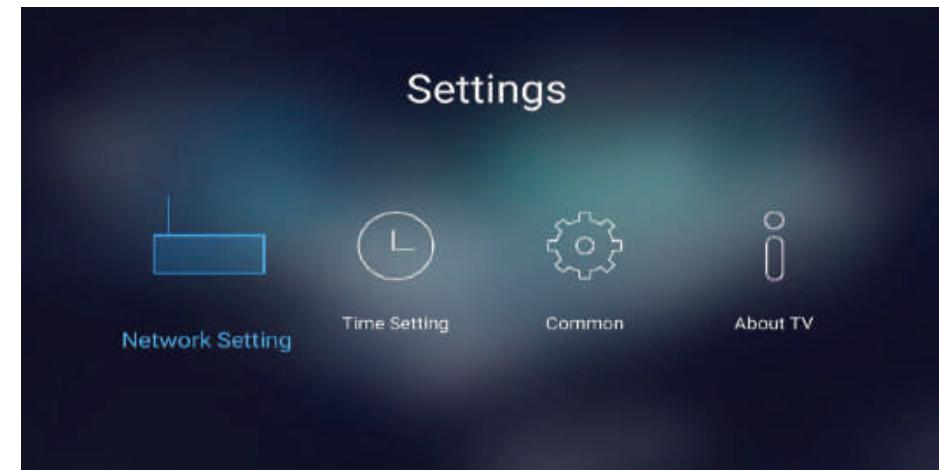

Press ▲/▼button to select the Network that you can open the Wi-Fi. As the figure shows.

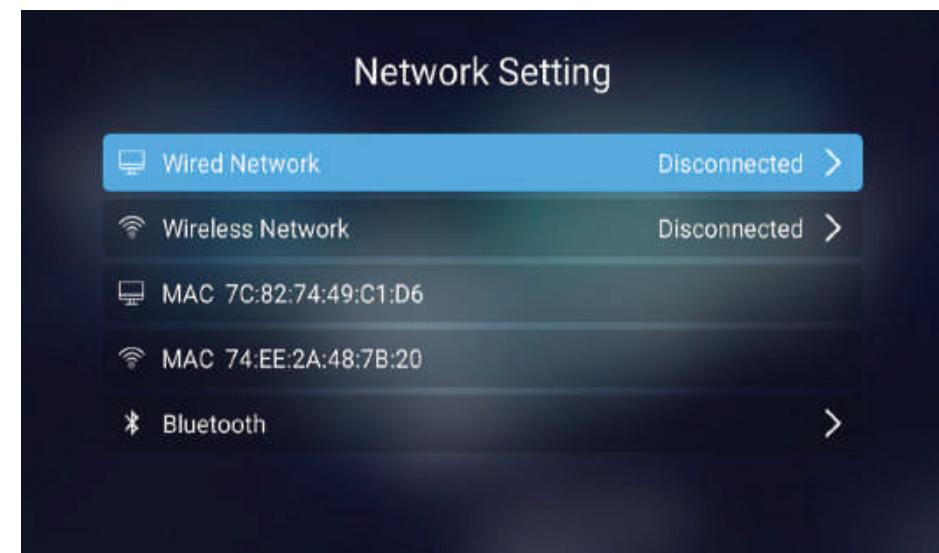


Home

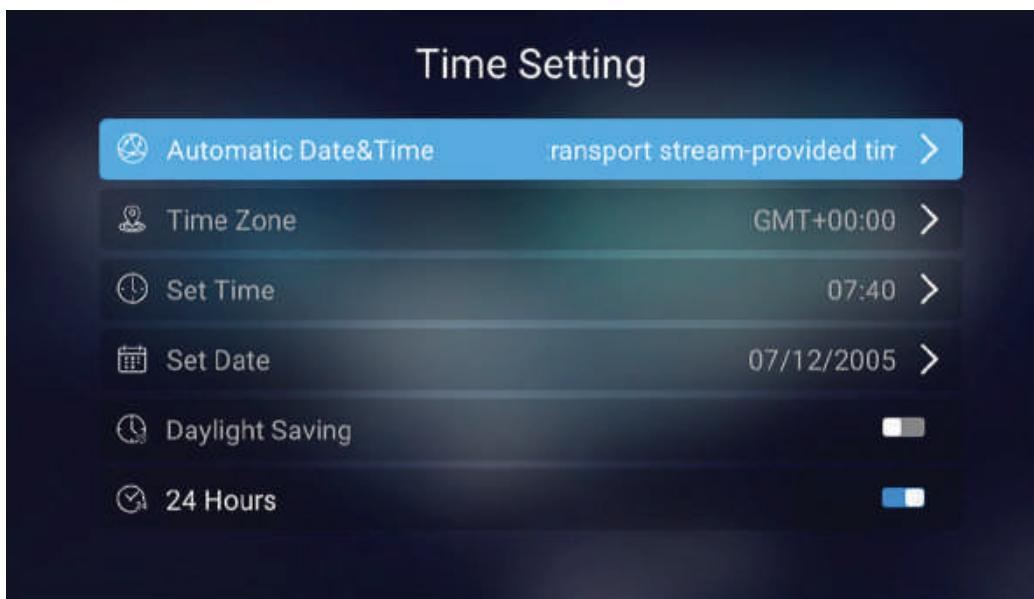


Press **◀/▶** button to select wallpapers that you can know these pictures.

As the figure shows.

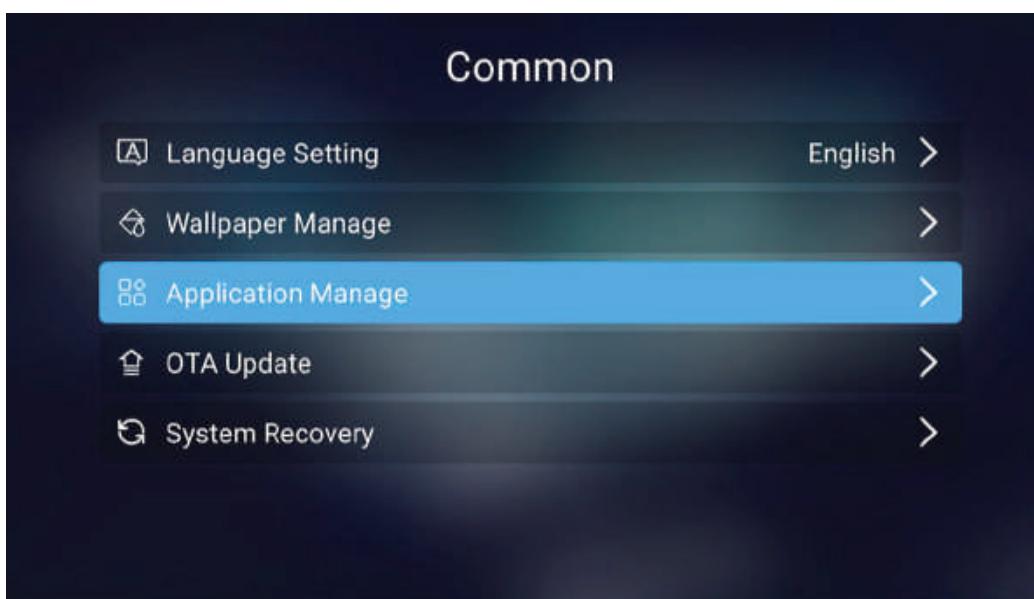


Press **◀/▶** button to select application that you can know how many apps you have downloaded and this feature you also can unload the app. As the figure shows.

Home

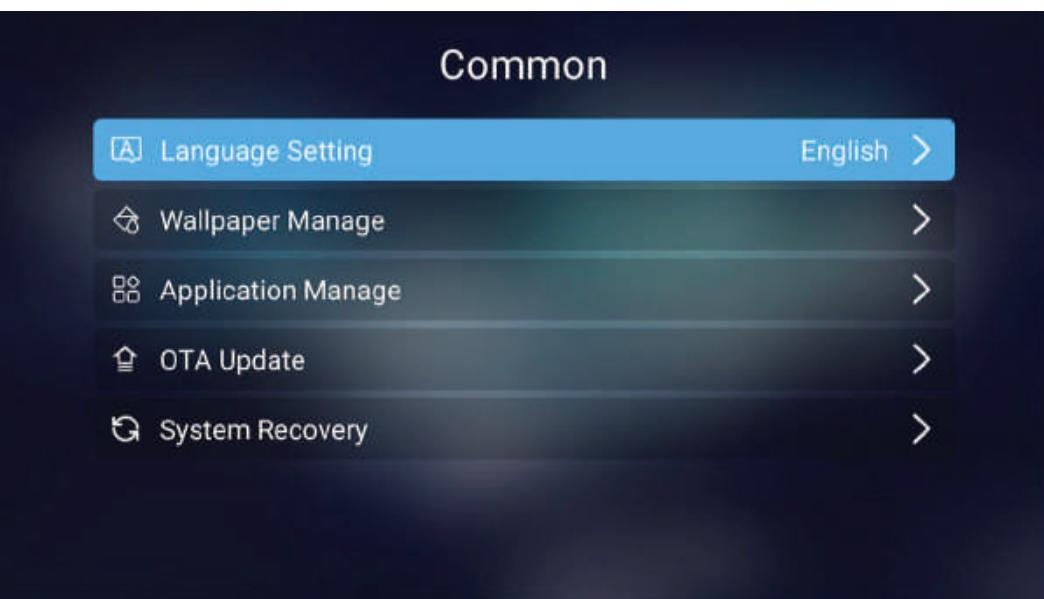

Press **◀/▶** button to select the Language that you want.

As the figure shows.

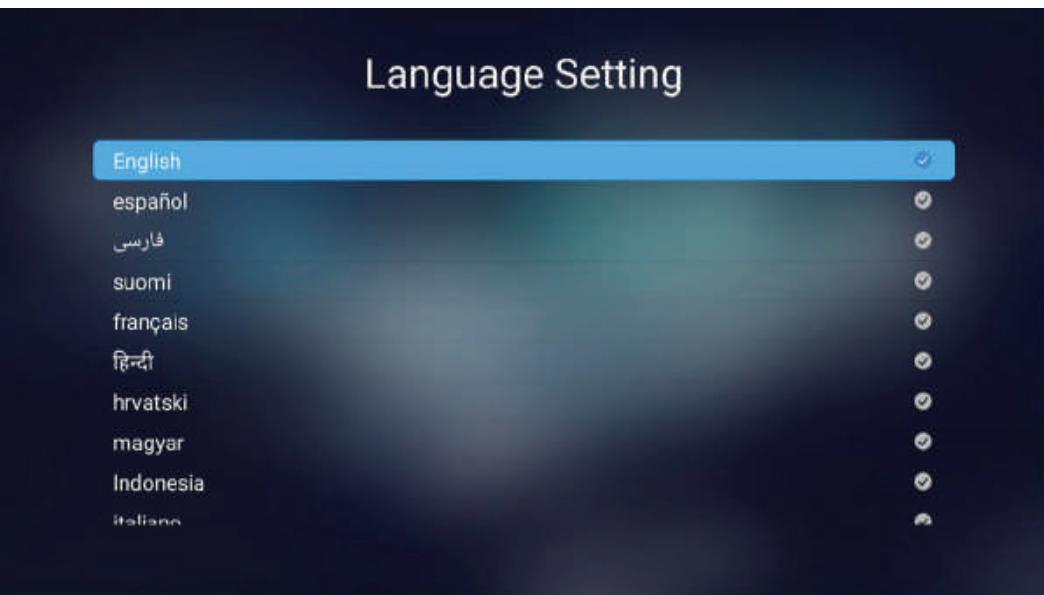


Press **◀/▶** button to select the time that you can change. As the figure shows.

Home




Press **◀/▶** button to select the About TV that you can find the information about TV.

As the figure shows.

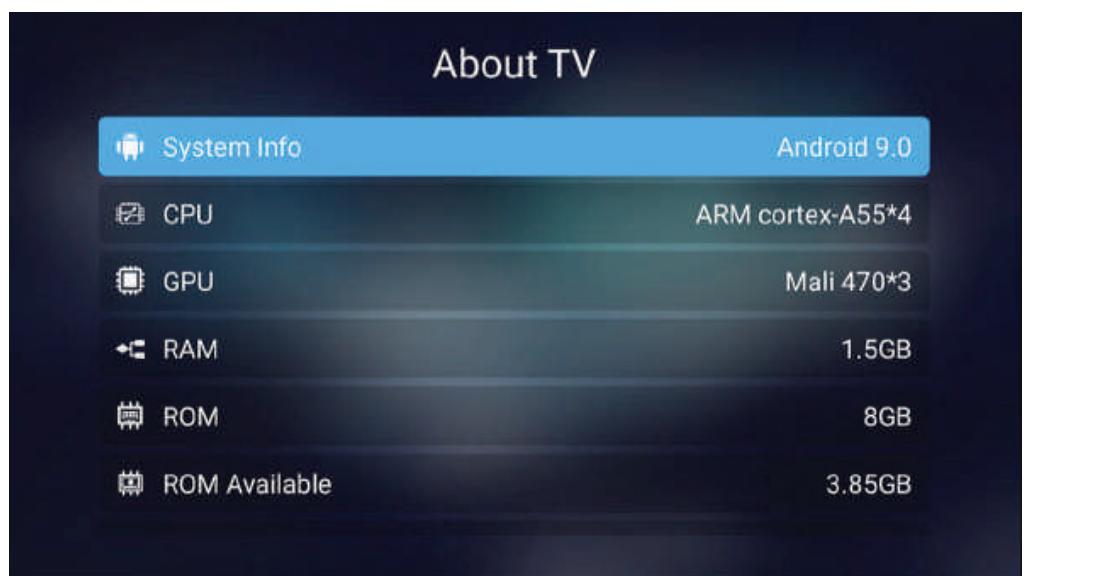


Home

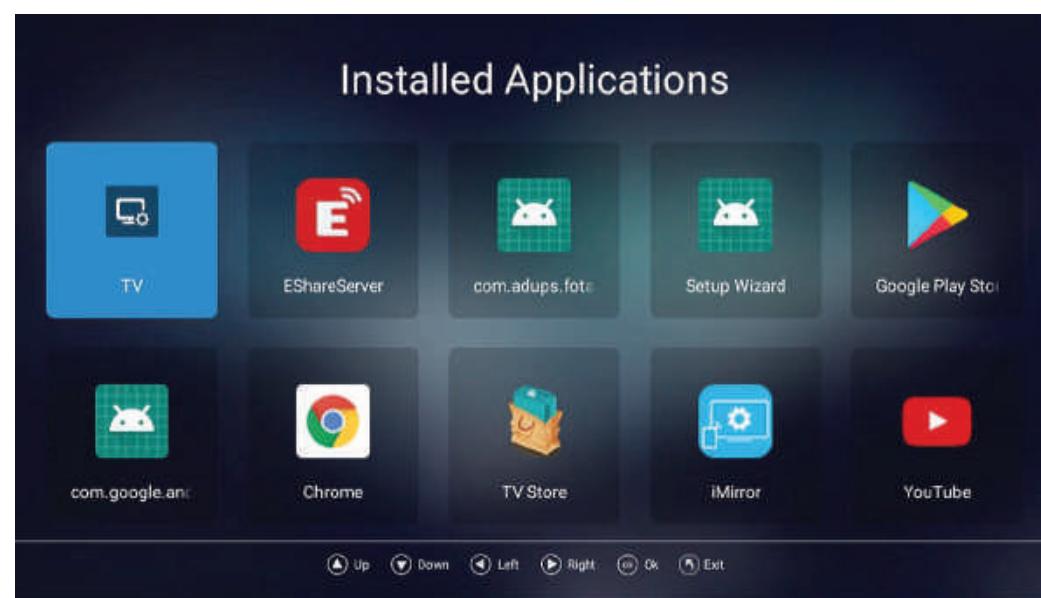

Press **◀/▶** button to select reset that you can reset the system.

As the figure shows.

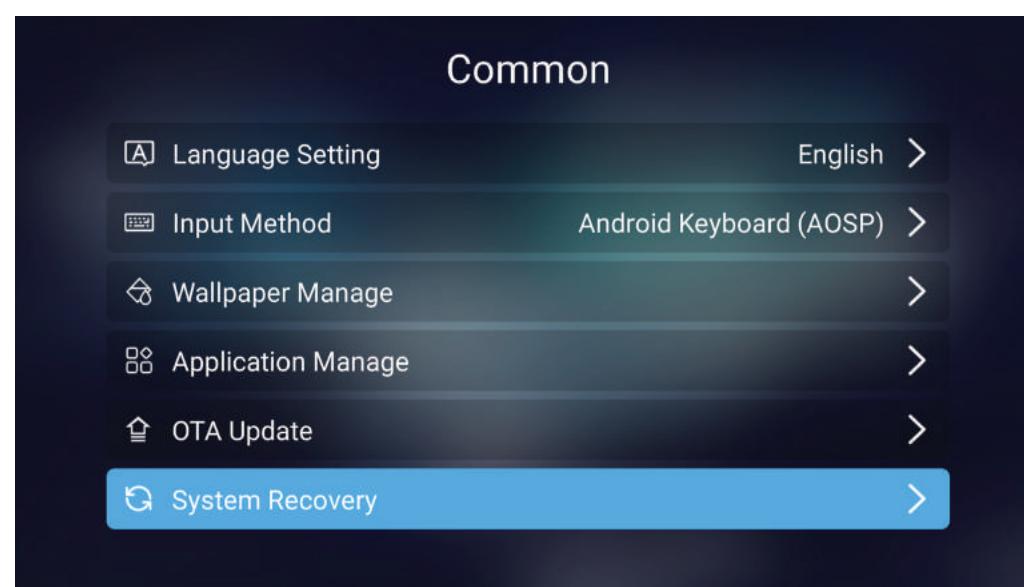

Technical Specifications

Master unit

LED Model	6520HDU9P0
Aspect Ratio	16/9
Panel Size	65"
Power Supply	100-240VAC 60/50Hz
Power Consumption of Speaker	8W+8W
Dimension(L × H × W) and Weight	Excluding base Unpacking:1463x847x76 (mm)
	Including base Unpacking:1463x906x255 (mm) NetWeight: 20.5 kg
Android Version	9.0.0
RAM	2GB
ROM	16GB

Operating environment temperature: 0°C~40°C ;RH: 20%~80%;Non-condensing

Technical specifications for TV

- 1.Compatible system: PAL SECAM , BG DK I.
- 2.Antenna input:coaxial 75 Ω unbalanced DIN 1.
- 3.Picture and Sound input AV mini
- 4.High-quality audio and video input Ypbpr
- 5.HDMI Connector x3
- 6.USB x2
- 7.Ethernet RJ 45

A.HDMI Mode

Vertical Frequency (Hz)	Horizontal Frequency (Khz)	Resolution
59.94	31.468	480 p
50.00	31.25	576 p
60.00	45.00	720 p
60.00	33.75	1080 i

- When the signal received by the Display exceeds the allowed range, a warning message will appear on the screen.
- You can confirm the input signal format onscreen.

REQUIREMENT OF WIRE HARNESS

MINI AV_IN:



MINI COMPONENT_IN:



Simple Troubleshooting

If the display fails or the performance changes dramatically ,check the display in accordance with the following instructions. Remember to check the peripherals to pinpoint the source of the failure.

Symptom	Solution
Power cannot be turned on.(Power indicator does not light.)	-Check that both ends of the power cable are plugged into the socket appropriately and the wall socket is operational
No Input Signal message appears.	-Check that the signal line is connected properly . -Check that the power of the relevant peripherals is turned on. -Check that the Input option that has been selected matches with the input signal.
The remote control does not function properly.	-Check the batteries are not drained.(Use new batteries.) -Check that the remote control is within the operating range. -Check that the remote control is pointed to the remote control window on the display. -Check that there are no obstacles between the remote control and the remote control window.
Flashing spots or stripes appear on the screen.	-Check that there are no emission (Car, HV cable or Neon lamp) or other possible interference sources.
Image colour or quality deteriorates.	-Check that all the video settings are adjusted appropriately, such as brightness, contrast, colour etc. -For more information about video settings, refer to OSD Functions in Chapter 2.
Screen position and size are incorrect.	-Check that the screen position and size is adjusted appropriately.
Image or colour is incorrect.	-Check that the signal line is connected properly . -When connecting to a PC, you can change the resolution of the PC to acquire the correct image. The discrepancy of the PC output signal may affect the display of the image.
Display warning message.	-Check that the input signal line is properly fixed. -Select the correct input signal. -For more information, refer to Supported Signal Modes in Chapter 4.